

# SHARP®

## CONVECTION MICROWAVE OVEN OPERATION MANUAL

### MODEL

## SMC0985KSC

### CONTENTS

· Precautions to Avoid Possible Exposure to Excessive Microwave Energy .....	2
· For Customer Assistance .....	3
· Consumer Limited Warranty .....	4
· Important Safety Instructions .....	5
· Federal Communication Commission Radio Frequency Interference Statement .....	6
· Grounding Instructions .....	6
· Installation Guide .....	7
· Specifications .....	8
· Features Diagram .....	9-10
· Operation Procedure .....	11
· Controls .....	12-25
· Care of Your Microwave Oven .....	26-27
· Questions and Answers .....	28
· Cooking Instructions .....	29-38



READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN.

※Wipe the oven interior with a soft damp cloth after each use.  
If you leave grease or fat anywhere in the cavity it may overheat, smoke or even catch fire when using the oven next.



## **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

# CUSTOMER ASSISTANCE

CANADA ONLY

To aid in answering questions if you call for service or for reporting loss or theft, please use the space below to record the model and serial number located on the back side of the unit.

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Dealer Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_

Province: \_\_\_\_\_

Postal Code: \_\_\_\_\_

Telephone: \_\_\_\_\_

## PRODUCT SUPPORT

If you have questions about the setup or operation of your product, please refer to the corresponding section within this manual.

Additionally, visit <http://sharp.ca/en/contact-sharp> to access exclusive content about your product including:

- Find a Dealer
- Find Service Locations
- Downloads including the Installation Guide, Spec Sheet, and Owner's Manual

## CONTACT US

If at any time you have questions or comments concerning your SHARP product, please contact the SHARP Customer Assistance Center. We are available to assist you through multiple contact methods for your convenience:

 <p><b>EMAIL</b> Available 24/7 See the Contact Us section on our site.</p> <p><a href="http://sharp.ca/contact-emailus.aspx">http://sharp.ca/contact-emailus.aspx</a></p>	 <p><b>SUPPORT SITE</b> Product Downloads, Service Locator, Where to Buy, Toner Recycling Program and more.</p> <p>CA   <a href="https://sharp.ca/en/contact-sharp">https://sharp.ca/en/contact-sharp</a></p>	 <p><b>CALL US</b> CA <b>877-278-6709</b> Mon-Fri: 7am-7pm CST</p> <p>Contact a Sharp Advisor on the phone</p>
---	--	---

# SHARP®

## LIMITED WARRANTY

### Consumer Electronics Products

## Congratulations on your purchase!

Sharp Electronics of Canada Ltd. ("Sharp") warrants to the first purchaser for this Sharp brand product ("Product"), when shipped in its original container and sold or distributed in Canada by Sharp or by an authorized Sharp dealer, and Product was not sold "as is" or "sales final" that the Product will during the applicable warranty period, be free from defects in material and workmanship, and will within the applicable warranty period, either repair the defective Product or provide the first purchaser a replacement of the defective Product.

**Conditions:** This limited warranty shall not apply to:

- (a) Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual or other applicable Product documentation.
- (b) Any defects caused or repairs required as a result of any Product that has been tampered with, modified, adjusted or repaired by any person other than Sharp, a Sharp authorized service centre or a Sharp authorized servicing dealer.
- (c) Any defects caused or repairs required as a result of the use of the Product with items not specified or approved by Sharp, including but not limited to chemical cleaning agents.
- (d) Any replacement of accessories required through normal use of the Product, including but not limited to, remote controls, AC adapters, batteries, temperature probe, trays, filters, belts, ribbons, cables and paper.
- (e) Any cosmetic damage to the Product surface or exterior that has been defaced or caused by normal wear and tear.
- (f) Any defects caused or repairs required as a result of damage caused by any external or environmental conditions, including but not limited to, transmission line/power line voltage or liquid spillage or acts of God.
- (g) If the serial number or model number affixed to Product has been removed, defaced, changed, altered or tampered with.
- (h) This limited warranty will not apply if the Product has been used or is being used in a commercial setting or application; this warranty is meant solely for the non-commercial, household use of the Product by consumers in their home or residence.
- (i) Any installation, delivery, setup and/or programming charges
- (j) The removal and reinstallation of Over-The-Range Microwave, Microwave Drawer or Steam Oven if it is installed in an inaccessible location or requiring removal of cupboards, handles or other cosmetic parts, or is not installed in accordance with installation instructions included with Product.

**How to get service:** Warranty service may be obtained upon delivery of the Product, together with proof of purchase (including date of purchase) and a copy of this limited warranty statement, to an authorized Sharp service centre or an authorized Sharp servicing dealer. In home warranty service will be carried out to locations accessible by on-road service vehicle and within 50 km of an authorized Sharp service centre on any Over-The-Range Microwave Oven, Microwave Drawer Oven or Steam Oven. The servicer may if necessary take the unit for repair at the servicer's facility. No other person (including any Sharp dealer or service centre) is authorized to extend, enlarge or transfer this warranty on behalf of Sharp. The purchaser will be responsible for any and all removal, reinstallation, transportation and insurance costs incurred with exception for Over-The-Range Microwave Oven, Microwave Drawer Oven or Steam Oven whereby Sharp will be responsible for the removal and reinstallation.

The express warranties in this limited warranty are, except for consumer purchasers domiciled in Quebec, in lieu of and, except to the extent prohibited by applicable law, Sharp disclaims all other warranties and conditions, express or implied, whether arising by law, statute, by course of dealing or usage of trade, including, without limitation, implied warranties or conditions of merchantability and/or quality, fitness for a particular use or purpose, and/or non-infringement. **Limitations** (not applicable to consumer purchasers domiciled in Quebec to the extent prohibited under Quebec law): (a) Sharp shall not be liable for any incidental, special, consequential, economic, exemplary or indirect damages of any kind or nature (including lost profits or damages for loss of time or loss of use or loss of data) arising from or in any connection with the use or performance of a Product or a failure of a Product, even if Sharp is aware of or has been advised of the possibility of such damages; (b) the remedies described in this limited warranty constitute complete fulfillment of all obligations and responsibilities of Sharp to the purchaser with respect to the Product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. Some provinces may not allow the exclusion or limitation of certain damages, or limits on the duration or voiding of implied warranties or conditions; in such provinces, the exclusions and limits herein may not apply. This limited warranty is, except for consumer purchasers domiciled in Quebec, governed by the laws of the Province in Canada in which the purchaser has purchased the Product. For consumer purchasers domiciled in Quebec this limited warranty is governed by the laws of Quebec.

---

**WARRANTY PERIODS** (calculated from the date of original purchase): Parts & Labour (exceptions noted)

Microwave Oven	1 year	(magnetron - 4 additional years)
Wall Oven + Microwave Drawer	1 year	(magnetron - 4 additional years)
Steam Oven	1 year	
Small Kitchen Appliances	1 year	
Air Purifiers	1 year	

To obtain the name and address of the nearest Authorized Sharp Service Centre or Dealer, or for more information on this Limited Warranty, Sharp Extended Warranty Offers, Sharp Canada Products or Accessory Sales, please contact Sharp:

- By writing to Sharp Electronics Of Canada Ltd. at 5995 Avebury Road, Suite 900, Mississauga ON L5R 3P9
- Calling: at 905-568-7140
- Visiting our Web site: [www.sharp.ca](http://www.sharp.ca)

**THIS LIMITED WARRANTY IS VALID ONLY IN CANADA**

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

**WARNING-TO reduce the risk of burns, electrical shock, fire, injury to persons or exposure to excessive microwave energy:**

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 2.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 6.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers - for example, closed glass jars may explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. **HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE.** Use with caution when removing hot items.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel.  
Contact nearest authorized service facility for examination, repair or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water — for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surfaces.
14. Do not let cord hang over edge of table or counter.
15. Separate cleaning instructions are provided. See door surface cleaning instructions on page 26.
16. To reduce the risk of fire in the oven cavity:
  - a) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - c) If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
17. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**  
**To reduce the risk of injury to persons:**
  - a) Do not overheat the liquid.
  - b) Stir the liquid both before and halfway through heating it.
  - c) Do not use straight-sided containers with narrow necks.
  - d) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - e) Use extreme care when inserting a spoon or other utensil into the container.
18. Do not use this microwave oven to heat corrosive chemicals (for example, sulfides and chlorides). Vapours from such corrosive chemicals may interact with the contact and springs of the safety interlock switches thereby rendering them inoperable.
19. Keep the waveguide cover clean at all times. Wipe the oven interior with a soft damp cloth after each use. If you leave grease or fat anywhere in the cavity it may overheat, smoke or even catch fire when next using the oven.
20. Never heat oil or fat for deep frying as you cannot control the temperature and doing so may lead to overheating and fire.
21. Do not operate the oven without the glass tray in place. Be sure it is properly sitting on the rotating base.
22. When the appliance becomes excessively hot, a protective device activates to prevent damage from overheating, causing the operation to stop automatically and the display off. If the protective device has been activated, please wait until it recovers. Once the appliance has cooled, the display will turn on and the microwave will be ready for use again.

## SAVE THESE INSTRUCTIONS

# FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

**WARNING:**

This equipment generates and uses ISM frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception.

It has been type-tested and found to comply with limits for an ISM Equipment pursuant to part 18 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the followings.

- Reorient the receiving antenna of radio or television.
- Relocate the microwave oven with respect to the receiver.
- Move the microwave oven away from the receiver.
- Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

THE MANUFACTURER is not responsible for any radio or TV interference caused by UNAUTHORIZED MODIFICATION to this microwave oven. It is the responsibility of the user to correct such interference.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, the grounding plug reduces the risk of electric shock by providing an escape wire for electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING:**

Improper use of the grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

- If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

**WARNING:**

Do not cut or remove the third (ground) prong from the power cord under any circumstances.

# INSTALLATION GUIDE

## 1. Examine the oven after unpacking.

Check for damage such as a misaligned door, broken door or dent in the cavity. If any damage is visible, DO NOT INSTALL, and notify your dealer immediately.


## 2. Level, flat location.

Install the microwave oven on a level, flat surface.

## 3. Ventilation.

Do not block air vents. If they are blocked during operation, the oven may overheat and eventually cause a failure.

For proper ventilation, allow minimum 8 inches of free space necessary above the top surface of the oven, 4 inches at back and 2 inches at both sides.

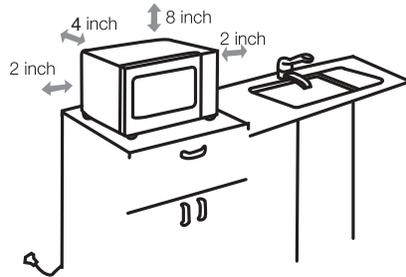

## 4. Away from radio and TV sets.

Poor television reception and radio interference may result if the oven is located close to a TV, radio, antenna, feeder, etc.

Place the oven as far from them as possible.

## 5. Away from heating appliances and water taps.

Keep the oven away from heat, steam or splashing liquids. These things can adversely affect oven wiring and contacts.

## 6. Power supply.

- Check your local power source.



This microwave oven requires a current of approximately 14 amperes, 120 Volts, 60Hz and a grounded outlet.

1. Longer cord sets or extension cords are available and may be used if care is exercised in their use.

2. If a long cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the oven.
- The extension cord must be a grounding type 3-wire cord.
- The longer cord should be arranged so that it will not drape the table top or counter where it can be pulled on by children or tripped over unintentionally.

## 7. The oven should only be used on a countertop over 3 feet above the floor.

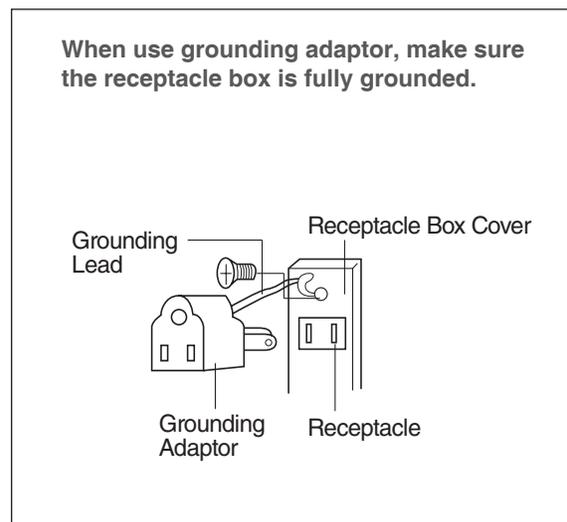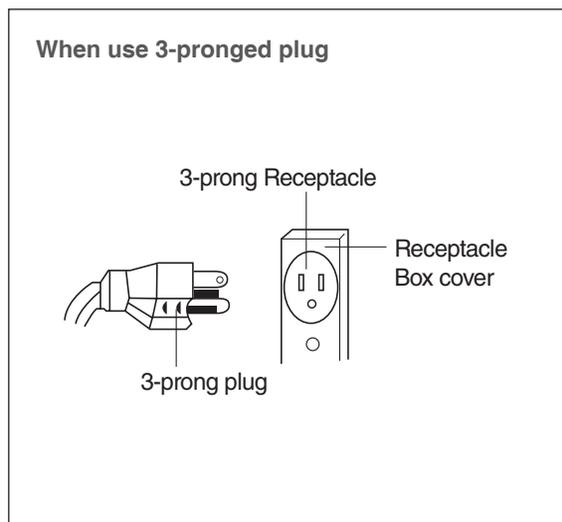


"THE CANADIAN ELECTRICAL CODE DOES NOT ALLOW THE USE OF THE GROUNDING ADAPTOR"


# SPECIFICATIONS

POWER SUPPLY		120V AC, 60Hz SINGLE PHASE WITH GROUNDING
MICROWAVE	INPUT POWER	1500 W
	ENERGY OUTPUT	900W (MICROWAVE) / 1450W (CONVECTION)
	FREQUENCY	2,450 MHz
OUTSIDE DIMENSIONS (W x D x H)		19.6 x 15.77 x 11.38 in.
CAVITY DIMENSIONS (W x D x H)		13.39 x 14.17 x 7.76 in.
CAVITY VOLUME		0.9 cu.ft.
NET WEIGHT		APPROX. 34.37 lbs.
TIMER		95 min.
POWER SELECTIONS		11 Levels

\*Specifications are subject to change without notice.

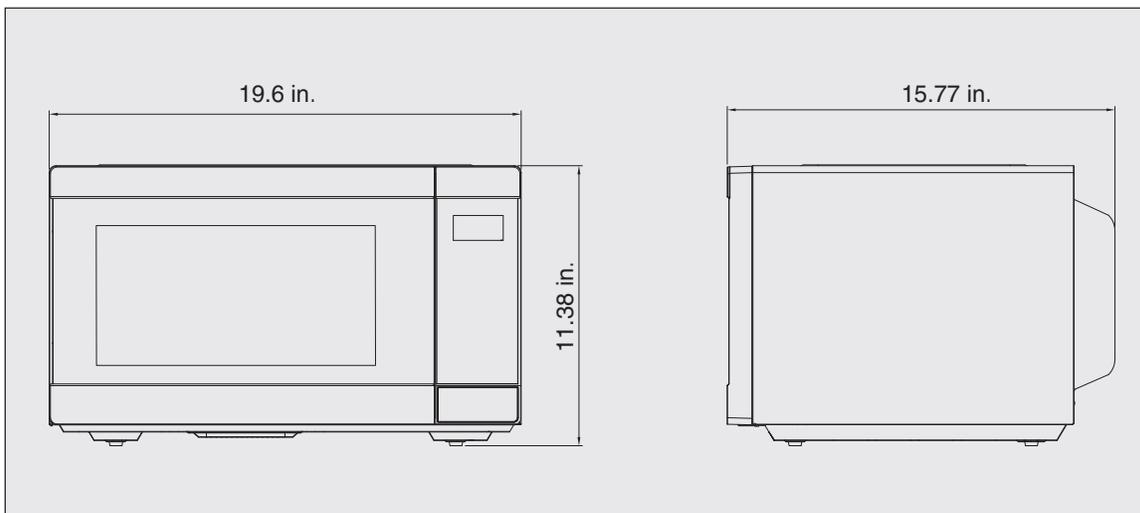


# FEATURES DIAGRAM

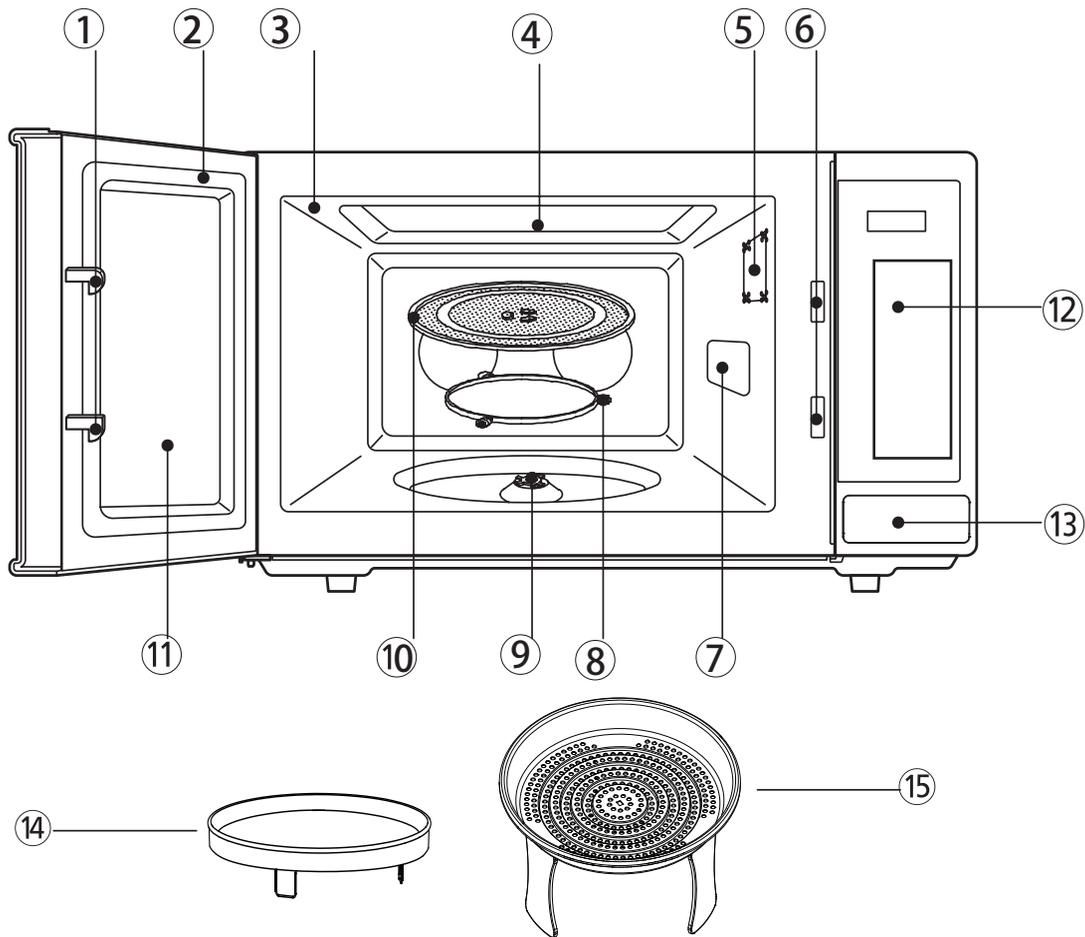

- ① **Door Latch** - If the door is opened while the oven is operating, the magnetron will automatically shut off.
- ② **Door Seal** - The door seal surface prevent microwaves escaping from the oven cavity.
- ③ **Oven Cavity**
- ④ **Convection Fan & Top Heating Element**
- ⑤ **Oven Light** - Automatically turns on when the oven door is open and operating.
- ⑥ **Safety Interlock System**
- ⑦ **Waveguide Cover** - Protects the microwave outlet from splashes of cooking foods.
- ⑧ **Roller Guide** - This must always be used for cooking together with the glass cooking tray.
- ⑨ **Coupler** - This fits over the shaft in the center of the oven cavity floor. This is to remain in the oven for all cooking.
- ⑩ **Glass Cooking Tray** - Made of special heat resistant glass. The tray must always be in proper position before operating. Do not cook food directly on the tray.
- ⑪ **Viewing Screen** - Allows viewing of food. The screen is designed so that light can pass through, but not the microwaves.
- ⑫ **Control Panel**
- ⑬ **Door Open Button** - To open the door push the door open button.
- ⑭ **Baking and Roasting Pan**
- ⑮ **Air Fry Tray**

# FEATURES DIAGRAM

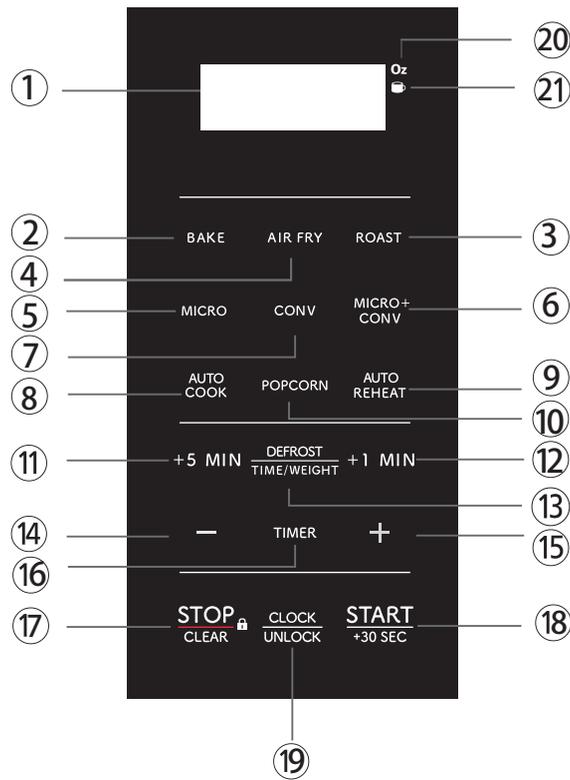

- ① **DISPLAY** - Cooking time, power level, indicators and current time are displayed.
- ② **BAKE** - Used to bake food.
- ③ **ROAST** - Used to roast food.
- ④ **AIR FRY** - Used to air fry food.
- ⑤ **MICRO** - Used to set power level.
- ⑥ **MICRO+CONV** - Used to set combination cooking program.
- ⑦ **CONV** - Used to set convection program.
- ⑧ **AUTO COOK** - Used to select an Auto Cook programs.
- ⑨ **AUTO REHEAT** - Used to set automatic reheating programs.
- ⑩ **POPCORN** - Used to set Popcorn program.
- ⑪ ⑫ **+5 MIN/+1 MIN** - Press to set time of a cooking program.
- ⑬ **DEFROST/TIME/WEIGHT** - Press to set defrost program based on time/weight.

- ⑭ ⑮ **+/-** - Used to select cooking menus, time, food weight, portion, temperature and power level. Below is the time increments for **+/-**.

Time Range	0:10~5:00	5:00~10:00	10:00~30:00	30:00~95:00
<b>+/-</b> increments	10 seconds	30 seconds	1 minutes	5 minutes

- ⑯ **TIMER** - Press to set timer function. Press and hold to turn control panel button sounds on/off.
- ⑰ **STOP/CLEAR** - Used to stop the oven operation or to delete the cooking data. Used also to Enable/Disable Child Safety Lock.
- ⑱ **START/+30 SEC** - Used to start the oven and also used to set a reheat time.
- ⑲ **CLOCK/UNLOCK** - Used to set the clock. Used to open the door when Child-Resistant Door Lock feature is enabled.
- ⑳ **Oz MARK** - Used to indicate the weight unit of food in auto menu. For example, 8.0 Oz of Veggie.
- ㉑ **Cup MARK** - Used to indicate the number of cups in Beverage menu. For example, one cup.



# OPERATION PROCEDURE

This section includes useful information about oven operation.

- 1 Plug power supply cord into a standard 3-pronged 14 Amp, 120V AC, 60Hz power outlet.
- 2 After placing the food in a suitable container, open the oven door and put it on the glass tray. The glass tray and roller guide must always be in place during cooking.
- 3 Close the door. Make sure that it is firmly closed.
- 4 The oven light is on when the microwave oven is operating.
- 5 The oven door can be opened at any time during operation by pushing the door open button of control panel. This will vary depending on if your microwave has the Child Resistant Door Lock enabled. See page 12. If not enabled and door is opened, the oven will automatically shut off.
- 6 Each time a pad is touched, a BEEP will sound to acknowledge the touch. Holding down the "Timer" button disables the button sounds.
- 7 The oven automatically cooks on full power unless set to a lower power level.
- 8 The display will show "12:00" when the oven is plugged in.
- 9 Time clock returns to the present time when the cooking time ends.
- 10 When the STOP/CLEAR pad is touched during the oven operation, the oven stops cooking and all information retained. To erase all information (except the present time), touch the STOP/CLEAR pad once more. If the oven door is opened during the oven operation, all information is retained.
- 11 If the START/+30 SEC pad is touched and the oven does not operate, check the area between the door and door seal for obstructions and make sure the door is closed securely. The oven will not start cooking until the door is completely closed or the program has been reset.
- 12 If the oven has worked for more than 2 minutes, the fan will continue to run for 3 minutes when pause or stop the cooking.

Make sure the oven is properly installed and plugged into the electrical outlet.

Note: During initial start up you may detect a slight smell and/or smoke. Use Convection function at 400°F without food at let it run for approximately 15 minutes.

## WATTAGE OUTPUT CHART

- The power level is set by setting a cooking time, then press Power Level pad repeatedly to choose the power level needed. The chart shows the display and the percentage of power.

POWER LEVEL (DISPLAY)	APPROXIMATE PERCENTAGE OF POWER
PL10	100%
PL9	90%
PL8	80%
PL7	70%
PL6	60%
PL5	50%
PL4	40%
PL3	30%
PL2	20%
PL1	10%
PL0	0%

# CONTROLS

## CHILD-RESISTANT DOOR LOCK

This convection microwave oven is equipped with the Child-Resistant Door Lock feature as a cETL safety requirement for all countertop microwave ovens sold in Canada. Follow the instructions below to learn about this feature.

The door lock is only prompted by a cooking action. The door will stay locked for the duration of the cooking time, plus 30 min after completion of the cooking operation. To open the door during this time:

- (1) Press "CLOCK/UNLOCK" first.
- (2) Press door button to open the door.



If user tries to open the door without pressing the "CLOCK/UNLOCK" button, "Door" will appear on the display as a reminder to unlock the door.




- Note:
1. The user must open the door within 10 seconds of pressing the "CLOCK/UNLOCK" Otherwise, the door lock will be reactivated.
  2. The Child Resistant Door Lock will automatically disengage after 30 minutes after cooking operation has completed.

## DISABLE / ENABLE DOOR LOCK FEATURE

The Door Lock Feature can be disabled or re-enabled if you want. Please follow the instructions below.

To disable / re-enable this feature, press "-", "+", and "CLOCK/UNLOCK" (hold "CLOCK/UNLOCK" button for 3 seconds).

- (1) Press "-" first.
- (2) Next, press "+".
- (3) Press "CLOCK/UNLOCK" and hold for 3 seconds.

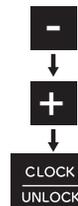

(hold for 3 seconds)

Note: If display is off, press any button on the control panel to turn display on before attempting to disable/enable the Child-Resistant Door Lock Feature.

When disabled, "OFF" will be displayed with an audible sound.



When re-enabled, "Door" will be displayed with an audible sound.



Note: Once disabled, this feature will remain disabled even after a power outage.

"+" and "-" can be used to toggle through menus and adjust cook time, timer, clock, etc. But if "-" is pressed in standby mode it will show the status of the child resistant door lock - "Off" if the lock is disabled, or "Door" if the lock is enabled.

## CONTROLS

---

### SETTING THE CLOCK

---

When the oven is first plugged in, the display will show "12:00" and a tone will sound. If the AC power ever goes off, the display show "12:00" when the power comes back on.

---

- (1) Press "CLOCK/UNLOCK", "Hr 12" will display.  
Press "CLOCK/UNLOCK" again, "Hr 24" will display.
- (2) Press "START/+30 SEC" to confirm setting.
- (3) Press "-", "+", "+5 MIN" and "+1 MIN" keys to program current time.



For example, to set the 12-hour clock to 11:58...

Press "CLOCK/UNLOCK", then press "START/+30 SEC" to select 12-Hour Clock.

Next, you can press "+5 MIN" twice, and "+1 MIN" once to input "11".

Press "START/+30 SEC" to confirm your hours input.

Next, you can press the "-" twice to input "58".

Press "START/+30 SEC" to confirm your minutes input and set the clock time.

- (4) Note that the ":" will continuously flash while the clock is set.

Note:

1. In the process of clock setting, if the "STOP/CLEAR" button is pressed or if there is no operation selected within 30 seconds, the oven will go back to the previous setting automatically.
2. If the clock needs to be reset, repeat steps 1- 4.

### KITCHEN TIMER MODE

---

Timer operates as a minute timer and operates without microwave energy.

---

- (1) Press "TIMER" display will show "0:00" .
- (2) Enter your desired time by using the "-", "+", "+5MIN", "+1MIN" buttons. (The maximum time that can be set is 95 minutes).
- (3) Press "START/+30 SEC" to confirm setting.
- (4) When the timer ends, the buzzer will beep 5 times. If the clock is set, the LED will display the current time.



- Note:
1. During kitchen timer operation, the clock time will not be displayed.
  2. When using the kitchen timer, no other program can be set.
- 

The display counts down the time remaining in KITCHEN TIMER mode. When KITCHEN TIMER mode ends, you will hear 5 beeps.

---

## CONTROLS

Note: If cooking time is more than 2 minutes, the fan will keep running for 3 minutes at the end of cooking. However, if it's less than 2 minutes, the fan will turn off at the end of cooking.

### MICROWAVE COOK MODE

Accessory guide: Glass Turntable



- (1) Press "MICRO" once, the display will show "PL10".
- (2) Press "-", "+" keys to select power level.
- (3) Press "START/+30 SEC" to confirm the power level.
- (4) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the cooking time. (The maximum cooking time is 95 minutes)
- (5) Press "START/+30 SEC" to start cooking.



Example: to cook the food with 80% microwave power for 15 minutes.

- a. Press "MICRO" once. "PL10" displays.
- b. Press "-" twice to select PL8, or 80% microwave power.
- c. Press "START/+30 SEC" to confirm the power level.
- d. Press "+5 MIN" three times.
- e. Press "START/+30 SEC" to start cooking.



Note:

1. In the process of setting, if the "STOP/CLEAR" button is pressed or if there is no operation selected within 30 seconds, the oven will go back to the previous setting automatically.
2. If "PL0" is selected, the oven will work with fan only and no power.

### QUICK START MICROWAVE COOK

Accessory guide: Glass Turntable



In waiting state, press "+", "+5 MIN", "+1 MIN" buttons followed by "START/+30 SEC" to quickly cook at maximum microwave power level. The maximum cooking time is 95 minutes.

### +30 SEC

+30 sec allows you to reheat for 30 seconds at 100% (full power) by simply pressing the START/+30 SEC pad.

By repeatedly pressing the START/+30 SEC pad, you can extend cooking time up to 95 minutes by 30 second increments.



1. Press the START/+30 SEC pad. When you press the START/+30 SEC pad, "0:30" is displayed, and the oven starts reheating.

**NOTE :** +30 SEC cannot be used with AUTO COOK, POPCORN, AUTO REHEAT and TIME/WEIGHT DEFROST.

Note: During Microwave cooking, Bake, Air fry, Roast, Conv., Micro.+Conv., time can be added by pressing "START/+30 SEC" button.

# CONTROLS

## TIME DEFROSTING

When TIME DEFROST is selected, the automatic cycle divides the defrosting time into periods of alternating defrost and stand times by cycling on and off.

Accessory guide: Glass Turntable



(1) Press "DEFROST/TIME/WEIGHT" once, the display will show "0:00".



(2) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the defrosting time. (The effective time range is 0:10-95:00 )

(3) Press "START/+30 SEC" to start defrosting. The remaining cooking time will be displayed.

When you touch START/+30 SEC pad, the display counts down the time to show you how much defrosting time is left in the TIME DEFROST mode.

During defrosting, the system will pause and sound to remind user to turn food over. After that, press "START/+30 SEC" pad to resume defrosting.

When the defrosting time ends, you will hear 4 beeps.

## WEIGHT DEFROSTING

WEIGHT DEFROST automatically sets the ideal defrosting time based on the food's weight—taking the guesswork out of the process.

Follow the steps below for easy defrosting.

Accessory guide: Glass Turntable



(1) Press "DEFROST/TIME/WEIGHT" twice, the display will show "dEF1".



(2) Press "-", "+" to choose food type.

FOOD TYPE	DEFROST CODE	WEIGHT RANGE
Meat	dEF1	1.0oz~48.0oz
Poultry	dEF2	1.0oz~48.0oz
Seafood	dEF3	1.0oz~32.0oz

(3) Press "START/+30 SEC" to confirm the food type.

(4) Press "-", "+" to input the food weight.

(5) Press "START/+30 SEC" to start defrosting.

The defrosting time is automatically determined by the weight selected.

During defrosting, the system will pause and sound to remind user to turn food over, after that, press "START/+30 SEC" pad to resume defrosting.

When the defrosting time ends, you will hear 4 beeps.


# CONTROLS

## BAKE

Accessory guide: Glass Turntable



Baking and Roasting Pan

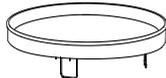

For Bake, you can select the type of food you want to cook from the programs listed on the cooking menu label located on the interior panel of the oven. Follow the steps below for baking.

- (1) Press "BAKE" once, the display will show "350F". 
- (2) Press "-", "+" to choose the temperature needed (350F - 375F - 400F - 300F - 325F).
- (3) Press "START/+30 SEC" to confirm the temperature.
- (4) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the baking time. (The effective time range is 0:10-95:00 ).
- (5) Press "START/+30 SEC" to start preheating, the display will interchangeably show the selected temperature and "P-Ht".
- (6) When designated temperature has been reached, beep will sound. The display will show "ADD" "FOOD" and the selected temperature. Open the oven door or press the "STOP/CLEAR", then place food into the oven.
- (7) Press "START/+30 SEC" to start baking.

Note:

1. The longest preheat time is 30 minutes, and it cannot be set. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds, if there is no operation in 30 minutes, the cooking program will end automatically.

This oven has two pre-programmed settings that make it easy to bake. Follow the steps below for baking.

- (1) Press "BAKE" twice, the display will show "b-1". 
- (2) Press "-", "+" to choose the food code.

FOOD TYPE CODE	PORTION	PREHEATING TEMPERATURE
b-1: Cookies	6 Cookies	350F
b-2: Cake	9 inch round pan	350F

- (3) Press "START/+30 SEC" to start preheating, the display will interchangeably show the selected temperature and "P-Ht".
- (4) When designated temperature has been reached, beep will sound. The display will show "ADD" "FOOD" and the selected temperature. Open the oven door or press the "STOP/CLEAR", then place food into the oven.
- (5) Press "START/+30 SEC" to start baking.

Note:

1. The longest preheat time is 30 minutes, and it cannot be set. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds, if there is no operation in 30 minutes, the cooking program will end automatically.

# CONTROLS

## AIR FRY

Accessory guide: Glass Turntable



Air Fry Tray



For Air Fry cooking, you can select the type of food you want to cook from the programs listed on the cooking menu label located on the interior panel of the oven. Follow the steps below for air frying.

- (1) Press "AIR FRY" once, the display will show "400F" . 
- (2) Press "-", "+" to choose the temperature needed (400F - 350F - 375F).
- (3) Press "START/+30 SEC" to confirm the temperature.
- (4) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the cooking time. (The effective time range is 0:10-95:00 ).
- (5) Press "START/+30 SEC" to start cooking.

This oven has seven pre-programmed temperatures settings that make it easy to air fry. Follow the steps below for cooking.

- (1) Press "AIR FRY" twice, the display will show "AF-1". 
- (2) Press "-", "+" to choose the food code (AF-1 - AF-2 - AF-3 - AF-4 - AF-5 - AF-6 - AF-7).
- (3) Press "START/+30 SEC" to confirm the food type.
- (4) Press "-", "+" to choose the food weight.
- (5) Press "START/+30 SEC" to start cooking.

FOOD TYPE CODE	WEIGHT	COOKING TIME
AF-1: Chicken Drumsticks	8.0 oz	28:00
	12.0 oz	31:00
	16.0 oz	35:00
	20.0 oz	38:00
	24.0 oz	42:00
AF-2: Chicken Nuggets	6.0 oz	13:00
	8.0 oz	15:00
	10.0 oz	19:00
	12.0 oz	23:00
AF-3: Chicken Wings	8.0 oz	28:00
	12.0 oz	30:00
	16.0 oz	32:00
	20.0 oz	36:00

## CONTROLS

FOOD TYPE CODE	WEIGHT	COOKING TIME
AF-4: French Fries	8.0 oz	12:30
	10.0 oz	14:00
AF-5: Mozzarella Sticks	6.0 oz	10:00
	8.0 oz	11:00
	10.0 oz	12:00
	12.0 oz	13:00
	14.0 oz	14:00
	16.0 oz	15:00
AF-6: Onion Rings	8.0 oz	17:00
	10.0 oz	19:00
AF-7: Popcorn Chicken	8.0 oz	22:00
	10.0 oz	24:00
	12.0 oz	26:00
	16.0 oz	28:00


# CONTROLS

## ROAST

Accessory guide: Glass Turntable



Baking and Roasting Pan

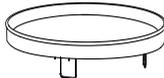

For Roast cooking, you can select the type of food you want to cook from the programs listed on the cooking menu label located on the interior panel of the oven.

Follow the steps below for roasting.

(1) Press " ROAST" once, the display will show " 350F " .



(2) Press "-", "+" to choose the temperature needed (350F - 375F - 400F - 300F - 325F).

(3) Press "START/+30 SEC" to confirm the temperature.

(4) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the roasting time. (The effective time range is 0:10-95:00).

(5) Press "START/+30 SEC" to start roasting.

This oven has four pre-programmed temperatures settings that make it easy to roast.

Follow the steps below for baking.

(1) Press " ROAST " twice, the display will show "Ar-1".



(2) Press "-", "+" to choose the food code (Ar-1 - Ar-2 - Ar-3 - Ar-4).

(3) Press "START/+30 SEC" to confirm the food type.

(4) Press "-", "+" to choose the food weight.

(5) Press "START/+30 SEC" to start roasting.

FOOD TYPE CODE	WEIGHT	COOKING TIME
Ar-1: Pork Loin	32 oz	35:00
	48 oz	45:00
Ar-2: Pork Tenderloin	16 oz	22:00
	32 oz	34:00
Ar-3: Roasted Potatoes	4.0 oz	28:00
	6.0 oz	30:00
	8.0 oz	33:00
	10.0 oz	36:00
	12.0 oz	40:00
	16.0 oz	42:00
Ar-4: Salmon Filet	4.0 oz	25:00
	8.0 oz	28:00
	12.0 oz	31:00
	16.0 oz	34:00
	20.0 oz	37:00

## CONTROLS


---

### CONVECTION COOKING

---

Accessory guide: Glass Turntable

Baking and Roasting Pan

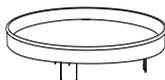

---

Follow the steps below for convection cooking.

---

- (1) Press "CONV." once, the display will show "350F". 
- (2) Press "-", "+" to choose the temperature needed (350F - 375F - 400F - 175F - 200F - 225F - 250F - 275F - 300F - 325F).
- (3) Press "START/+30 SEC" to confirm the temperature.
- (4) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the baking time. (The effective time range is 0:10-95:00).
- (5) Press "START/+30 SEC" to start preheating, the display will interchangeably show the selected temperature and "P-Ht".
- (6) When designated temperature has been reached, beep will sound. The display will show "Add Food" and the selected temperature. Open the oven door or press the "STOP/CLEAR", then place food into the oven.
- (7) Press "START/+30 SEC" to start baking.

Note:


1. The preheat time is automatically generated by the oven and cannot be set manually. The longest preheat time is 30 minutes. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds, if there is no operation in 30 minutes, the cooking program will end automatically.

### MICRO+CONV COOKING

---

Accessory guide: Glass Turntable

Baking and Roasting Pan

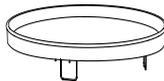

---

Note: DO NOT ATTEMPT TO USE AIR FRY BASKET AT THE SAME TIME AS BAKING/ROASTING PAN DURING MICROWAVE OPERATION - ARCING MAY OCCUR.

---

This oven has four pre-programmed temperatures settings that make it easy to cook with both convection heat and microwave simultaneously.

Follow the steps below for micro-conv cooking.

---

- (1) Press "MICRO+CONV." once, the display will show "350F". 
- (2) Press "-", "+" to choose the temperature needed (350F - 375F - 400F - 325F).
- (3) Press "START/+30 SEC" to confirm the temperature.
- (4) Press "-", "+", "+5 MIN" and "+1 MIN" keys to input the baking time. (The effective time range is 0:10-95:00).
- (5) Press "START/+30 SEC" to start cooking.

# CONTROLS

## AUTO COOK

Accessory guide: Glass Turntable



With auto cook function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the oven.

Follow the steps below for auto cooking.

(1) Press "AUTO COOK" once, the display will show "AC-1".



(2) Press "-", "+" to choose the food code (AC-1 - AC-2 - AC-3 - AC-4 - AC-5 - AC-6).

(3) Press "START/+30 SEC" to confirm the food type.

(4) Press "-", "+" to choose the food weight.

(5) Press "START/+30 SEC" to start cooking.

FOOD TYPE CODE	WEIGHT	COOKING TIME
AC-1: Beverage	1 cup	1:20
	2 cups	2:20
	3 cups	3:20
AC-2: Frozen Pizza	6.0 oz	2:30
	9.0 oz	2:40
	12.0 oz	2:50
AC-3: Fresh Vegetable	8.0 oz	2:50
	12.0 oz	4:10
	16.0 oz	5:10
	20.0 oz	7:10
AC-4: Frozen Vegetable	8.0 oz	4:30
	12.0 oz	6:00
	16.0 oz	7:30
	20.0 oz	9:00
AC-5: Oatmeal	1 pack	1:30
	2 packs	2:30
	3 packs	3:30
	4 packs	4:30
AC-6: Potato	8.0 oz	4:00
	12.0 oz	5:30
	16.0 oz	7:00
	20.0 oz	9:00
	24.0 oz	11:30

# CONTROLS

## AUTO REHEAT

Accessory guide: Glass Turntable



With auto reheat function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the oven.

Follow the steps below for auto cooking.

- (1) Press "AUTO REHEAT" once, the display will show "AH-1".
- (2) Press "-", "+" to choose the food code (AH-1 - AH-2 - AH-3 - AH-4 - AH-5 - AH-6 - AH-7 - AH-8).
- (3) Press "START/+30 SEC" to confirm the food type.
- (4) Press "-", "+" to choose the food weight.
- (5) Press "START/+30 SEC" to start cooking.



FOOD TYPE CODE	WEIGHT	COOKING TIME
AH-1: Chili	4.0 oz	1:50
	8.0 oz	2:00
	12.0 oz	2:30
	16.0 oz	2:50
	20.0 oz	3:10
	24.0 oz	3:30
AH-2: Dinner Plate	8.0 oz	2:00
	12.0 oz	3:00
	16.0 oz	4:00
	20.0 oz	5:00
	24.0 oz	6:00
AH-3: Frozen Entree	8.0 oz	5:00
	12.0 oz	7:00
	16.0 oz	10:00
	20.0 oz	13:00
	24.0 oz	16:00
AH-4: Mac and Cheese	4.0 oz	1:10
	8.0 oz	1:30
	12.0 oz	2:10
	16.0 oz	2:50
	20.0 oz	3:30
	24.0 oz	4:10

# CONTROLS

FOOD TYPE CODE	WEIGHT	COOKING TIME
AH-5: Mashed Potatoes	4.0 oz	1:10
	8.0 oz	1:30
	12.0 oz	2:10
	16.0 oz	2:50
	20.0 oz	3:30
	24.0 oz	4:10
AH-6: Pasta	4.0 oz	1:30
	8.0 oz	1:50
	12.0 oz	2:20
	16.0 oz	2:50
	20.0 oz	3:20
	24.0 oz	3:50
AH-7: Rice	4.0 oz	1:20
	8.0 oz	1:50
	12.0 oz	2:20
	16.0 oz	2:50
	20.0 oz	3:20
	24.0 oz	3:50
	28.0 oz	4:20
AH-8: Soup/Sauce	4.0 oz	1:50
	8.0 oz	2:10
	12.0 oz	2:30
	16.0 oz	3:10
	20.0 oz	3:50
	24.0 oz	4:10

## CONTROLS

---

### POPCORN

---

Accessory guide: Glass Turntable



- (1) Press "POPCORN" once, the display will show "1.75".
- (2) Press "-", "+" to choose the popcorn weight.
- (3) Press "START/+30 SEC" to start cooking.



FOOD TYPE	WEIGHT	COOKING TIME
POPCORN	1.75 oz	2:00
	3.0 oz	2:20
	3.5 oz	2:30

### MULTI-STAGE COOKING

---

At most, 3 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Note: Microwave cooking, convection cooking and micro.+conv. cooking can work in the multi-stage cooking.

- (1) Press "DEFROST/TIME/WEIGHT" once, then press "-", "+", "+5 MIN" and "+1 MIN" keys to input the defrost time.
- (2) Input the second microwave cooking program. Do not press "START/+30 SEC" after selecting cooking time.
- (3) Input the third microwave cooking program. Do not press "START/+30 SEC" after selecting cooking time.
- (4) Press "START/+30 SEC" to start cooking.

---

If defrost is not necessary, please start the operation from step 2.

---

### CHILD SAFETY LOCK (CONTROL PANEL LOCK)

---

Lock: In waiting state, press "STOP/CLEAR" for 3 seconds, there will be a long "beep" denoting the entering into the child-lock state; meanwhile, the display will show "88:88".

Lock Cancel: In locked state, press "STOP/CLEAR" for 3 seconds, there will be a long "beep" denoting that lock is released.

---

## CONTROLS

---

### INQUIRING FUNCTION

---

- (1) In the microwave or multi-stage cooking, press "MICRO" to inquire microwave power level, the current microwave power will be displayed for five seconds, then the oven will turn back to the previous state.
- (2) In the Bake/Air Fry/Roast/Convection/Microwave+Convection cooking, press "BAKE/AIR FRY/ROAST/ CONV/MICRO+CONV" to inquire cooking temperature, the cooking temperature will be displayed for five seconds, then the oven will turn back to the previous state.

### TO STOP THE OVEN WHILE THE OVEN IS OPERATING

---

1. Press the STOP/CLEAR pad.
  - You can restart the oven by pressing the START/+30 SEC pad.
  - Press the STOP/CLEAR pad once more to erase all instructions.
  - You must enter in new instructions.
2. Open the door.
  - You can restart the oven by closing the door and pressing the START pad.

**NOTE:** Oven stops operating when door is opened.  
If Child-Resistant Door Lock is enabled, user must press "CLOCK/UNLOCK" before opening the door.

### SILENT MODE

---

#### To activate the silent mode:

In standby mode or during cooking, press and hold "TIMER" for 3 seconds. A long beep will sound, the display will show "OFF". When you press the keys, it will not make a sound. This also disable the end of cooking reminder.



#### To deactivate the silent mode:

In silent mode, press and hold "TIMER" for 3 seconds. A long beep will sound, the display will show "ON". When you press the keys, it will make a sound. This will enable the end of cooking reminder.



### ENERGY SAVE MODE

---

#### To activate the energy save mode:

In waiting state, if user quickly presses the "STOP/CLEAR", the oven will enter energy save mode and the display will turn off.

#### To deactivate the energy save mode:

In energy save mode, pressing any button or opening and closing the oven door can turn on the display.


## CARE OF YOUR MICROWAVE OVEN

### CARE OF YOUR MICROWAVE OVEN

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

- 1 Turn the oven off before cleaning.
- 2 Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty.  
The use of harsh detergent or abrasives is not recommended.
- 3 The outside oven surface should be cleaned with soap and water, rinsed and dried with a soft cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- 4 If the Control Panel becomes wet, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel.
- 5 If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates malfunction of the unit.
- 6 It is occasionally necessary to remove the glass tray, baking and roasting pan, air fry tray for cleaning. Wash them in warm, sudsy water or in a dishwasher.
- 7 The roller guide and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent water or window cleaner and dry. The roller guide may be washed in mild sudsy water.

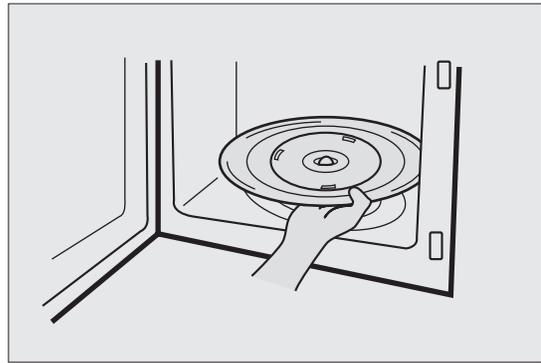


#### ROLLER GUIDE

- 1 The ROLLER GUIDE and oven floor should be cleaned frequently to prevent excessive noise.
- 2 The ROLLER GUIDE MUST ALWAYS be used for cooking together with the Glass Tray.

#### GLASS TRAY

- 1 DO NOT operate the oven without the Glass Tray in place.
- 2 DO NOT use any other Glass Tray with this oven.
- 3 If Glass Tray is hot, ALLOW TO COOL before cleaning or placing it in water.
- 4 DO NOT cook directly on the Glass Tray. (Except for popcorn)

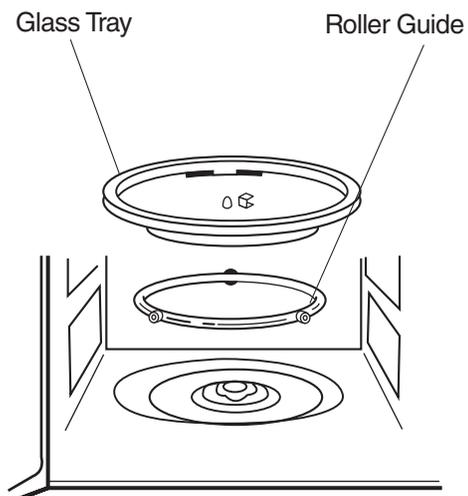

## CARE OF YOUR MICROWAVE OVEN

### BEFORE YOU CALL FOR SERVICE

Refer to following checklist, you may prevent an unnecessary service call.

\* The oven doesn't work :

1. Check that the power cord is securely plugged in.
2. Check that the door is firmly closed.
3. Check that the cooking time is set.
4. Check for a blown circuit fuse or tripped main circuit breaker in your house.

\* Sparking in the cavity;

1. Check utensils. Metal containers or dishes with metal trim should not be used.
2. Check that metal skewers or foil does not touch the interior walls.

### CARE AND CLEANING

Although your oven is provided with safety features, it is important to observe the following:

1. It is important not to disable or tamper with safety interlocks.
2. Do not place any object between the oven front face and the door or allow residue to accumulate on sealing surfaces. Wipe the sealing area frequently with a mild detergent, rinse and dry. Never use abrasive powders or pads.
3. When opened, the door must not be subjected to strain, for example, a child hanging on an opened door or any load that could cause the oven to fall forward and cause injury and damage to the door. Do not operate the oven if it is damaged, until it has been repaired by a qualified service technician. It is particularly important that the oven closes properly and that there is no damage to the:
  - i) Door (bent)
  - ii) Hinges and Hooks (broken or loosened)
  - iii) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except a qualified service technician.
5. The oven should be cleaned regularly and any food deposits removed;
6. If the oven is not kept clean, surface deterioration may occur, potentially reducing the appliance's lifespan and leading to a hazardous situation.

## QUESTIONS AND ANSWERS

**\* Q: I accidentally ran my microwave oven without any food in it. Is it damaged?**

A : Running the oven empty for a short time will not damage the oven. However, it is not recommended.

**\* Q: Can the oven be used with the glass tray or roller guide removed?**

A : No. Both the glass tray and roller guide must always be used in the oven before cooking.

**\* Q: Can I open the door when the oven is operating?**

A : The door can be opened anytime during the cooking operation. Then microwave energy will be instantly switched off and the time setting will maintain until the door is closed.

Note: If Child-Resistant Door Lock is enabled, user must press "CLOCK/UNLOCK" before opening the door.

**\* Q: Why do I have moisture in my microwave oven after cooking?**

A : The moisture on the side of your microwave oven is normal. It is caused by steam from cooking food hitting the cool oven surface.

**\* Q: Does microwave energy pass through the viewing screen in the door?**

A : No. The metal screen bounces back the energy to the oven cavity. The holes are made to allow light to pass through. They do not let microwave energy pass through.

**\* Q: Why do eggs sometimes pop?**

A : When baking or poaching eggs, the yolk may pop due to steam build-up inside the yolk membrane. To prevent this, simply pierce the yolk with a toothpick before cooking. Never cook eggs without piercing their shells.

**\* Q: Why is this standing time recommended after the cooking operation has been completed?**

A : Standing time is very important.

With microwave cooking, the heat is in the food, not in the oven. Many foods build up enough internal heat to allow the cooking process to continue, even after the food is removed from the oven. Standing time for joints of meat, large vegetables and cakes is to allow the inside to cook completely, without overcooking the outside.

**\* Q: What does "standing time" mean?**

A : "Standing time" means that food should be removed from the oven and covered for additional time to allow it to finish cooking. This frees the oven for other cooking.

**\* Q: Why does my oven not always cook as fast as the microwave cooking guide says?**

A : Check your cooking guide again, to make sure you've followed directions exactly; and to see what might cause variations in cooking time. Cooking times and heat settings in the guide are suggestions intended to help prevent overcooking — the most common issue when getting used to a microwave oven.

Variations in the size, shape and weights and dimensions could require longer cooking time. Use your own judgement along with the cooking guide suggestions to check whether the food has been properly cooked just as you would do with a conventional cooker.

**\* Q: Will the microwave oven be damaged if it operates while empty?**

A : Yes. Never run it empty.

**\* Q: Can I operate my microwave oven without the turntable or turn the turntable over to hold a large dish?**

A : No. If you remove or turn over the turntable, you will get poor cooking results. Dishes used in your oven must fit on the turntable.

**\* Q: Is it normal for the turntable to turn in either direction?**

A : Yes. The turntable rotates clockwise or counterclockwise, depending on the rotation of the motor when the cooking cycle begins.

**\* Q: Can I pop popcorn in my microwave oven? How do I get the best results?**

A : Yes. Pop packaged microwave popcorn following manufacture's guidelines. Do not use regular paper bags. Use the "listening test" by stopping the oven as soon as the popping slows to a "pop" every 1 or 2 seconds. Do not repop unpopped kernels.

# COOKING INSTRUCTIONS

## UTENSIL GUIDE

Only use utensils that are suitable for use in microwave ovens.

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken choosing the utensil. If the utensil is marked microwave-safe, you do not need to worry. The following table lists various utensil and indicates whether and how they should be used in a microwave oven.

UTENSIL	SAFE	COMMENTS
<b>Aluminium foil</b>	▲	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
<b>Crust plate</b>	●	Do not preheat for more than 8 minutes.
<b>China and earthenware</b>	●	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
<b>Disposable polyester cardboard dishes</b>	●	Some frozen foods are packaged in these dishes.
<b>Fast-food packaging</b> • Polystyrene cups containers	●	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	×	May catch fire.
• Recycled paper or metal trims	×	May cause arcing.
<b>Glassware</b> • Oven-to-table ware • Fine glassware	● ●	Can be used, unless decorated with a metal trim. Can be used to warm foods or liquids.
• Glass jars	●	Delicate glass may break or crack if heated suddenly. Must remove the lid. Suitable for warming only.
<b>Metal</b> • Dishes • Freezer bag twist ties	× ×	May cause arcing or fire.
<b>Paper</b> • Plates, cups, napkins and paper towels • Recycled paper	● ×	For short cooking times and warming. Also to absorb excess moisture. May cause arcing.
<b>Plastic</b> • Containers	●	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	●	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	▲	Only if boilable or oven-safe. Should not be airtight. Prick with a fork, if necessary.
<b>Wax or grease-proof paper</b>	●	Can be used to retain moisture and prevent spattering.

● : Recommended use

▲ : Limited Use

× : Not Recommended

# COOKING INSTRUCTIONS

## USE YOUR MICROWAVE OVEN SAFELY

### General Use

Do not attempt to disable or tamper with safety interlocks.

Do not place any object between the oven front frame and the door or allow residue to build up on sealing surfaces. Wipe with a mild detergent, rinse and dry.

Never use abrasive powders or pads.

Do not subject the oven door to strain or weight such as a child hanging on an open door.

This could cause the oven to fall forward resulting in injury to you and damage to the oven.

Do not operate the oven if door seals or sealing surfaces are damaged; or if door is bent; or if hinges are loose or broken.

Do not operate the oven empty. This will damage the oven.

Do not attempt to dry clothes, newspapers or other materials in the oven. They may catch on fire.

Do not use recycled paper products as they may contain impurities which may cause sparks or fires.

Do not hit or strike the control panel with hard objects. This can damage the oven.

### Food

Never use your microwave oven for home canning. The oven is not designed for proper home canning. Improperly canned food may spoil and be dangerous to consume.

Always use the minimum recipe cooking time. It is better to undercook rather than overcook foods.

Undercooked foods can be returned to the oven for more cooking. If food is overcooked, it cannot be corrected.

Heat small quantities of food or foods with low moisture carefully. These can quickly dry out, burn or catch on fire.

Do not heat eggs in the shell. Pressure may build up and eggs can explode.

Potatoes, apples, egg yolks and sausages are examples of food with non-porous skins.

These must be pierced before cooking to prevent bursting.

Do not attempt to deep fat fry in your microwave oven.

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the

temperature to even out, stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

Do not leave the oven unattended while popping corn.

Do not pop corn in a paper bag unless it is the commercially prepared Microwave Popcorn product. The kernels can overheat and ignite a brown paper bag.

Do not put packaged Microwave Popcorn bags directly on the oven tray. Place the package on a microwave safe glass or ceramic plate to avoid overheating and cracking the oven tray.

Do not exceed the Microwave Popcorn manufacturers suggested popping time.

Longer popping does not yield more popcorn but it can result in scorch, burn or fire. Remember, the Popcorn bag and tray can be too hot to handle. Remove with caution and use pot holders.

## ARCING

*If you see arcing, open the door and correct the problem.*

Arcing is the microwave term for sparks in the oven.

Arcing is caused by:


- Metal or foil touching the side of the oven.
- Foil not molded to food (upturned edges act like antennas).
- Using both the Baking/Roasting Pan and Air Fry Tray at the same time during Microwave Operation
- Metal, such as twist-ties, poultry pins, or gold rimmed dishes, in the microwave.
- Recycled paper towels containing small metal pieces being used in the microwave.

# COOKING INSTRUCTIONS

## MICROWAVING PRINCIPLES


Microwave energy has been used in this country to cook and reheat food since early experiments with RADAR in World War II. Microwaves are present in the atmosphere all the time, both naturally and manmade sources. Manmade sources include radar, radio, television, telecommunication links and car phones.

## HOW MICROWAVES COOK FOOD

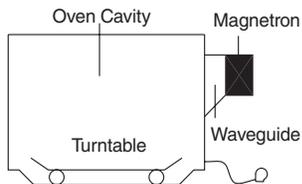


In a microwave oven, electricity is converted into microwave by the **MAGNETRON**.

### ►TRANSMISSION

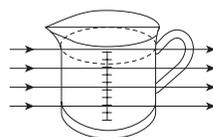


Then they pass through the cooking containers to be absorbed by the water molecules in the food, all foods contain water to a more or lesser extent.

### ►REFLECTION

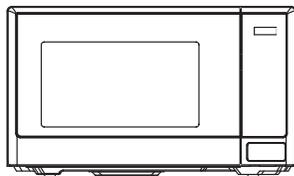

The microwaves bounce off the metal walls and the metal door screen.

### ►ABSORPTION

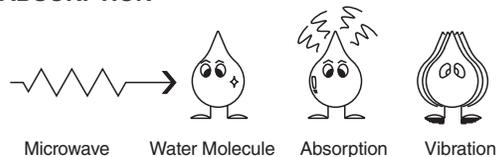

The microwaves cause the water molecules to vibrate which causes **FRICTION**, i.e. **HEAT**. This heat then cooks the food. Microwaves are also attracted to fat and sugar particles, and foods high in these will cook more quickly. Microwaves can only penetrate to a depth of 1½ - 2 inches (4-5cm) and as heat spreads through the food by conduction, just as in a traditional oven, the food cooks from the outside inwards.

## CONVERSION CHARTS

WEIGHT MEASURES		VOLUME MEASURES		SPOON MEASURES	
15 g	1/2 oz.	30 ml	1 fl.oz.	1.25 ml	1/4 tsp
25 g	1 oz.	100 ml	3 fl.oz.	2.5 ml	1/2 tsp
50 g	2 oz.	150 ml	5 fl.oz. (1/4 pt)	5 ml	1 tsp
100 g	4 oz.	300 ml	10 fl.oz. (1/2 pt)	15 ml	1 tbsp
175 g	6 oz.	600 ml	20 fl.oz. (1pt)		
225 g	8 oz.				
450 g	1 lb.				

FLUID MEASUREMENTS		
1 Cup	= 8 fl.oz	= 240 ml
1 Pint	= 16 fl.oz.	= 480 ml
1 Quart	= 32 fl.oz.	= 960 ml
1 Gallon	= 128 fl.oz.	= 3840 ml

# COOKING INSTRUCTIONS

---

## COOKING TECHNIQUES

### STANDING TIME

Dense foods e.g. meat, baking potatoes and cakes, require standing time (inside or outside of the oven) after cooking, to allow heat to finish conducting to cook the center completely. Wrap meat joints and baking potatoes in aluminium foil while standing. Meat joints need approx. 10-15 minutes, baking potatoes 5 minutes. Other foods such as plated meal, vegetables, fish, etc., require 2-5 minutes standing. After defrosting food, standing time should also be allowed. If food is not cooked after standing time, return to the oven and cook for additional time.

### MOISTURE CONTENT

Many fresh foods e.g. vegetables and fruit, vary in their moisture content throughout the season, particularly baking potatoes. For this reason cooking times may have to be adjusted. Dry ingredients e.g. rice, pasta, can dry out during storage so cooking times may differ.

### DENSITY

Porous airy foods heat more quickly than dense heavy foods.

### CLING FILM

Cling film helps keep the food moist and the trapped steam assists in speeding up cooking times. Pierce before cooking to allow excess steam to escape. Always take care when removing cling film from a dish as the build-up of steam will be very hot.

### SHAPE

Even shapes cook evenly. Food cooks better by microwave when in a round container rather than square.

### SPACING

Foods cook more quickly and evenly if spaced apart. NEVER pile foods on top of each other.

### STARTING TEMPERATURE

The colder the food, the longer it takes to heat up. Food from a fridge takes longer to reheat than food at room temperature.

### LIQUIDS

All liquids must be stirred before and during heating. Water especially must be stirred before and during heating, to avoid eruption. Do not heat liquids that have previously been boiled. DO NOT OVERHEAT.

### TURNING & STIRRING

Some foods require stirring during cooking. Meat and poultry should be turned after half the cooking time.

### ARRANGING

Individual foods e.g. chicken portions or chops, should be placed on a dish so that the thicker parts are towards the outside.

### QUANTITY

Small quantities cook faster than large quantities, also small meals will reheat more quickly than large portions.

### PIERCING

The skin or membrane on some foods will cause steam to build up during cooking. These foods must be pierced or a strip of skin should be peeled off before cooking to allow the steam to escape. Eggs, potatoes, apples, sausages etc, will all need to be pierced before cooking. DO NOT ATTEMPT TO BOIL EGGS IN THEIR SHELLS.

### COVERING

Cover foods with microwave cling film or a lid. Cover fish, vegetables, casseroles, soups. Do not cover cakes, sauces, baking potatoes or pastry items.

# COOKING INSTRUCTIONS

## DEFROSTING GUIDE

- ▶ Do not defrost covered meat. Covering might allow cooking to take place. Always remove outer wrap and tray. Use only containers that are microwave-safe.
- ▶ Begin defrosting whole poultry breast-side-down. Begin defrosting roasts fat-side-down.
- ▶ The shape of the package alters the defrosting time. Shallow rectangular shapes defrost more quickly than a deep block.
- ▶ After one-third of the defrost time has passed, check the food. You may want to turn it over, break it apart, rearrange it, or remove any thawed portions.
- ▶ During defrost, the oven will prompt you to turn the over. At this point, open oven door and check the food. Follow the techniques listed below for optimum defrost results.  
Then, close oven door, touch the START pad to complete defrosting.
- ▶ When defrosted, food should be cool, but softened in all areas. If still slightly icy, return to microwave oven very briefly, or let stand a few minutes. After defrosting, allow food to stand 5-60 minutes if there are any icy areas.  
Poultry and fish may be placed under running cool water until defrosted
- ⇨ **Turn over** : Roast, ribs, whole poultry, turkey breasts, hot dogs, sausages, steaks, or chops.
- ⇨ **Rearrange** : Break apart or separate steaks, chops, hamburger patties, ground meat, chicken or seafood pieces, chunks of meat such as stew beef.
- ⇨ **Shield** : Use small strips of aluminum foil to protect thin areas or edges of unevenly shaped foods such as chicken wings. To prevent arcing, do not allow foil to come within 1-inch of oven walls or door.
- ⇨ **Remove** : To prevent cooking, thawed portions should be removed from the oven at this point. This may shorten defrost time for food weighing less than 3 lbs. (1350g).

## Cooking chart

ITEM	POWER LEVEL	COOKING TIME PER LB./450G	SPECIAL INSTRUCTION
<b>MEAT</b>			
Beef joint - Rare	PL8	6-8 min.	- Chilled meat and poultry should be removed from the refrigerator at least 30 minutes before cooking. - Always let the meat and poultry stand, covered after cooking.
- Medium	PL8	7-9 min.	
- well done	PL8	9-11 min.	
Pork Joint	PL10	10-13 min.	
Bacon joint	PL10	8-10 min.	
<b>POULTRY</b>			
Whole chicken	PL10	4-9 min.	
Portions chicken	PL8	5-7 min.	
Breast (boned)	PL8	6-8 min.	
<b>FISH</b>			
Fish Fillets	PL10	3-5 min.	- Brush a little oil or melted butter over the fish, or add 15-30ml (1-2 tbsp) lemon juice, wine, stock, milk or water. - Always let the fish stand, covered, after cooking
Whole Mackerel, Cleaned and prepared	PL10	3-5 min.	
Whole Trout, Cleaned & Prepared	PL10	4-6 min.	
Salmon steaks	PL10	4-6 min.	

**NOTE** : The times provided above are intended as general guidelines only. Actual cooking times may vary depending on individual preferences, as well as the shape, cut, and composition of the food. Ensure that frozen meat, poultry, and fish are fully thawed before cooking.

# COOKING INSTRUCTIONS

## COOKING & REHEATING CHART

### Reheating chart

- Always check baby food carefully before serving to avoid the risk of burns.
- When heating pre-packaged ready-cooked foods, always follow the pack instructions carefully.
- If you freeze foods which were bought from the fresh or chilled counters, remember that they should be thoroughly thawed before following the heating instructions on the packed. It's worth putting a note on them so that other members of the household will remember too.
- Before reheating, remove any metal ties and transfer food from foil containers to a microwave-safe dish.
- Chilled (refrigerated) food takes longer to reheat than food at room temperature, such as freshly cooked items or those stored in a cupboard.
- All foods should be reheated using full microwave power.

ITEM	COOKING TIME	SPECIAL INSTRUCTIONS
Baby food 128g jar	20 sec.	Empty into a small serving bowl. Stir well once or twice during heating. Before serving, check the temperature carefully.
Baby milk 100ml / 4fl.oz. 225ml / 8fl.oz.	20-30 sec. 40-50 sec.	Stir or shake well and pour into a sterilized bottle. Before serving, shake well and check the temperature carefully.
Sandwich roll or bun 1 roll	20-30 sec.	Wrap in paper towel and place on glass microwaveable rack. <b>*Note : Do not use recycled paper towels.</b>
Lasagna 1 serving (10 ½ oz./300g)	4-6 min.	Place lasagna on microwaveable plate. Cover with plastic wrap and vent.
Casserole 1 cup 4 cups	1 ½-3 min. 5-7 min.	Cook covered, in microwaveable casserole. Stir once halfway through cooking.
Mashed potatoes 1 cup 4 cups	2-3 min. 6-8 min.	Cook covered, in microwaveable casserole. Stir once halfway through cooking.
Baked beans 1 cup	2-3 min.	Cook covered, in microwaveable casserole. Stir once halfway through cooking.
Ravioli or pasta in sauce 1 cup 4 cups	2-3 min. 6-9 min.	Cook covered, in microwaveable casserole. Stir once halfway through cooking.

# COOKING INSTRUCTIONS

## VEGETABLE CHART

Use a suitable glass (Pyrex) bowl with a lid. Add 30–45 ml (2–3 tbsp) of cold water per 250 g of vegetables, unless otherwise specified—refer to the cooking table for specific guidance. Cook covered for the minimum recommended time listed in the table, then continue cooking as needed to achieve your preferred texture. Stir once during cooking and once after. Add salt, herbs, or butter only after cooking. After microwaving, cover and let stand for 3 minutes to allow even heat distribution.

Tip: Cut fresh vegetables into evenly sized pieces. The smaller the pieces, the faster they will cook.

Note: All vegetables should be cooked using full microwave power.

### Cooking Guide for fresh vegetables

VEGETABLES	WEIGHT	TIME	COMMENTS
Broccoli	½ lb./250g 1 lb./500g	2-3 min 4-6 min	Prepare even sized florets. Arrange the stems to the centre.
Brussels sprouts	½ lb./250g	3-4 min	Add 60-75ml (4-5 tbsp.) water.
Carrots	½ lb./250g	2-3 min	Cut Carrots into even sized slices.
Cauliflower	½ lb./250g 1 lb./500g	2-3 min 4-6 min	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Zucchini	½ lb./250g	2-3 min	Cut Zucchini into slices. Add 30ml (2tbsp.) water or a knob of butter. Cook until just tender.
Eggplant	½ lb./250g	2-3 min	Cut Eggplant into small slices and sprinkle with 1 table-spoon lemon juice.
Leeks	½ lb./250g	2-3 min	Cut Leeks into thick slices.
Mushrooms	0.3 lb./125g ½ lb./250g	1-2 min 2-4 min	Prepare small whole or sliced Mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
Onions	½ lb./250g	2-3 min	Cut Onions into slices or halves. Add only 15ml (1tbsp. ) water.
Pepper	½ lb./250g	2-4 min	Cut Pepper into small slices.
Potatoes	½ lb./250g 1 lb./500g	3-5 min 5-7 min	Weigh the peeled Potatoes and cut them into even sized halves or quarters.
Turnip cabbage	½ lb./250g	4-6 min	Cut Turnip cabbage into small cubes.

### Cooking Guide for frozen vegetables

VEGETABLES	WEIGHT	TIME	INSTRUCTIONS
Spinach	0.3 lb./125g	1-2 min	Add 15ml (1tbsp.) cold water.
Broccoli	½ lb./250g	2½-4 min	Add 30ml (2 tbsp.) cold water.
Peas	½ lb./250g	2½-4 min	Add 15ml (1 tbsp.) cold water.
Green beans	½ lb./250g	3-5 min	Add 30ml (2 tbsp. ) cold water.
Mixed vegetables (carrots/peas/corn)	½ lb./250g	2½-4 min	Add 15ml (1 tbsp.) cold water.
Mixed vegetables (Chinese style)	½ lb./250g	3-5 min	Add 15ml (1 tbsp.) cold water.

# COOKING INSTRUCTIONS

## RECIPES

### TOMATO & ORANGE SOUP

1 oz. (25g) butter  
1 medium onion, chopped  
1 large carrot & 1 large potato, chopped  
1<sup>3</sup>/<sub>4</sub> lb (800g) canned, chopped tomatoes  
Juice and grated rind of 1 small orange  
1<sup>1</sup>/<sub>2</sub> pints (900ml) hot vegetable stock  
Salt and pepper to taste

1. Melt the in a large bowl on PL10 for 1 minute.
2. Add the onion, carrot and potato and cook on PL10 for 4 minutes. stir halfway through cooking.
3. Add the tomatoes, orange juice, orange rind and stock. Mix thoroughly. Season with salt and pepper to taste. Cover the bowl and cook on PL10 for 15 minutes. stir 2-3 times during cooking, until the vegetables are tender.
4. Blend and serve immediately.

### FRENCH ONION SOUP

1 large onions, sliced  
1 tbsp (15ml) corn oil  
2 oz. (50g) plain flour  
2 pints (1.2 liters) hot meat  
or vegetable stock  
Salt and pepper to taste  
2 tbsp (30ml) parsley, chopped  
4 thick slices French bread  
2 oz. (50g) cheese, grated

1. Place the onion and oil a bowl, mix well and cook on PL10 for 1 minutes.
2. Stir in the flour to make a paste and gradually add stock. Season and add the parsley.
3. Cover the bowl and cook on PL7 for 16 minutes.
4. Pour the soup into serving bowls, submerge bread and sprinkle generously with cheese.
5. Cook on PL7 for 2 minutes, until the cheese has melted.

### STIR FRIED VEGETABLES

1 tbsp (15ml) sunflower oil  
2 tbsp (30ml) soy sauce  
1 tbsp (15ml) sherry  
1 inch (2.5cm) root ginger,  
peeled and finely grated  
2 medium carrots, cut into fine strips  
4 oz. (100g) button mushrooms,  
chopped  
2 oz. (50g) beansprouts  
4 oz. (100g) snow peas  
1 red pepper, seeded and thinly sliced  
4 spring onions, chopped  
4 oz. (100g) canned water chestnuts,  
sliced  
1/4 head of Napa cabbage, thinly sliced

1. Place the oil, soy sauce, sherry, ginger, garlic and carrots in a large bowl, mix thoroughly
2. Cover and cook on PL10 for 3-5 minutes, stirring once.
3. Add the button mushrooms, beansprouts, snow peas, red pepper, spring onions, water chestnuts and Napa cabbage. Mix thoroughly.
4. Cook on PL10 for 5-6 minutes, until the vegetables are tender. Stir 2-3 times during cooking.

Stir fried vegetables are ideally served with meat or fish.

### HONEYED CHICKEN

4 boneless chicken breasts  
2 tbsp (30ml) clear honey  
1 tbsp (15ml) whole grain mustard  
1/2 tsp (2.5ml) dried tarragon  
1 tbsp (15ml) tomato puree  
1/4 pint (150ml) chicken stock

1. Place the chicken breasts in a casserole dish.
2. Mix all remaining ingredients together and pour over the chicken. Salt and pepper to taste.
3. Cook on PL10 for 13-14 minutes. Rearrange and coat the chicken with the sauce twice during cooking.

## COOKING INSTRUCTIONS

---

### BLUE CHEESE & CHIVE JACKETS

2 baking potatoes,  
(approx. 9 oz. (250g) each)  
2 oz. (50g) butter  
4 oz. (100g) blue cheese, chopped  
1 tbsp (15ml) fresh chives, chopped  
2 oz. (50g) mushrooms, sliced  
Salt and pepper to taste

1. Prick each potato in several places. Cook on PL10 for 7-9 minutes. Halve and scoop the flesh into a bowl, add the butter, cheese, chives, mushrooms, salt and pepper, mix thoroughly.
2. Pile mixture into the potato skins and place in a flan dish.
3. Cook on PL5 for 10 minutes.

### WHITE SAUCE

1 oz. (25g) butter  
1 oz. (25g) plain flour  
1/2 pint (300ml) milk  
Salt and pepper to taste

1. Place the butter in a bowl and cook on PL10 for 1 minute, until melted.
2. Stir in the flour and whisk in the milk. Cook on PL10 for 3-4 minutes, stirring every 2 minutes until thick and smooth. Season with salt and pepper to taste.

### STRAWBERRY JAM

1 1/2 lb. (675g) strawberries, hulled  
3 tbsp (45ml) lemon juice  
1 1/2 lb. (675g) caster sugar

1. Place strawberries and lemon juice in a very large bowl, heat on PL10 for 4 minutes, or until the fruit has softened. Add sugar, mix well.
2. Cook on PL7 for 20-25 minutes, until setting point\* is reached, stir every 4-5 minutes.
3. Pour into hot, clean jars. Cover, seal and label.

*\* setting point : To determine setting point, place 1 tsp (5ml) jam onto chilled saucer. Allow to stand for 1 minute. Move surface of jam gently with your finger, if the surface wrinkles setting point has been reached.*

### PLAIN MICROWAVE CAKE

4 oz. (100g) margarine  
4 oz. (100g) sugar  
1 egg  
4 oz. (100g) self raising flour, sifted  
2-3 tbsp (30-45ml) milk

1. Line the base of 8" (20.4cm) cake dish with grease-proof paper.
2. Cream the margarine and sugar together until light and fluffy. Beat in the eggs and fold in the sifted flour alternately with the milk.
3. Pour into prepared container. Cook on PL10 for 4-5 minutes, until a skewer comes out cleanly.
4. Leave the cake to stand for 5 minutes before turning out.

### OMELETTE

1/2 oz. (15g) butter  
4 eggs  
6 tbsp (90ml) milk  
Salt & pepper

1. Whisk together eggs and milk.
2. Place butter in 10" (26cm) flan dish. Cook on PL10 for 1 minute, until melted. Coat the dish with the melted butter.
3. Pour omelette mixture into flan dish. Cook on PL10 for 2 minutes. Whisk mixture and cook again on PL10 for 1 minutes.

## COOKING INSTRUCTIONS

---

### SCRAMBLED EGG

1/2 oz. (15g) butter  
2 eggs  
2 tbsp (30ml) milk  
Salt & pepper

1. Melt the butter in a bowl on PL10 for 1 minute.
2. Add the eggs, milk and seasoning and mix well.
3. Cook on PL10 for 3 minutes, stirring every 30 seconds.

### SAVOURY MINCE

1 small onion, diced  
1 clove garlic, crushed  
1 tsp (5ml) oil  
7 oz. (200g) can chopped tomatoes  
1 tbsp (15ml) tomato puree  
1 tsp (5ml) mixed herbs  
8 oz. (225g) minced beef  
Salt and pepper

1. Place onion, garlic and oil in casserole dish, and cook on PL10 for 2 minutes or until soft.
2. Place all other ingredients in casserole dish. Stir well.
3. Cover and cook on PL10 for 5 minutes then PL5 for 8-13 minutes or until the meat is cooked.

**SHARP®**

**SHARP ELECTRONICS OF CANADA LTD.**

5995 Avebury Road, Suite 900  
Mississauga, ON L5R 3P9 Canada

[sharp.ca](http://sharp.ca)