

SHARP®

**SOUND BAR HOME THEATER SYSTEM
BARRE DE SON SYSTÈME DE CINÉMA MAISON
SISTEMA DE CINE EN CASA CON BARRA DE SONIDO**

MODEL
MODELO
MODÈLE

HT-SBW192

**OPERATION MANUAL
MANUAL DE FUNCIONAMIENTO
MODE D'EMPLOI**



2.1ch

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

USB
PLAYBACK

MP3

OPTICAL™

**Wireless
Active
Subwoofer**

LED
INDICATOR

Bluetooth®

ENGLISH

--- Please refer to pages E-1 to E-14.

FRANÇAIS

--- Veuillez vous reporter aux pages F-1 à F-14.

ESPAÑOL

--- Consulte las páginas S-1 a S-14.

Special notes

For users in U.S.



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Explanation of Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SHARP is under license. Other trademarks and trade names are those of their respective owners.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

FOR YOUR RECORDS

For your assistance in reporting this unit in case of loss or theft, please record below the model number and serial number which are located at the bottom of the unit. Please retain this information.

Model number _____

Serial number _____

Date of purchase _____

Place of purchase _____

NOTES

- This audio system supports devices with Android 4.1, Jelly bean and Higher.
- For device with a lower Android version, refer the operation manual of the device for recommended app(application).

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), revenue-generating streaming applications (via Internet, intranets and/or other networks), other revenue-generating content distribution systems (pay-audio or audio-on-demand applications and the like) or on revenue-generating physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>

MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820 of the National Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Special notes (continued)

FCC Statement

FCC Notice

Supplier's Declaration Of Conformity
SHARP SOUND BAR HOME THEATER SYSTEM
HT-SBW192

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

MIZARI ENTERPRISES, INC.
5455 WILSHIRE BOULEVARD, SUITE 1410
LOS ANGELES, CA90036
TEL: 1-877-506-4900

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. It must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20 cm from nearby persons.

IC Radiation Exposure Statement (For Users In Canada)

This Class B digital apparatus complies with the Canadian ICES-003.

This device contains license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation.

To maintain compliance with the RF exposure guidelines, place the product at least 20 cm from nearby persons.

IMPORTANT SAFETY INSTRUCTIONS

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of this product, please read the following precautions carefully before use.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Additional Safety Information


- 15) Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For product intended to operate from battery power, or other sources, refer to the operating instructions.
- 16) Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 17) Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

- 18) Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the AC cord or plug is damaged,
 - b. If liquid has been spilled, or objects have fallen into the product,
 - c. If the product has been exposed to rain or water,
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e. If the product has been dropped or damaged in any way, and
 - f. When the product exhibits a distinct change in performance - this indicates a need for service.
- 19) Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 20) Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 21) Wall or ceiling mounting - When mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- 22) Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 23) Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- 24) Stand - Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.

Precautions

■ General

- Keep your equipment at least 4" (10 cm) of free space along the sides, top and back for proper ventilation.
- Use the unit on a firm, level surface free from vibration.
- Place the unit at least 12" (30 cm) away from any CRT TV to avoid color variations across the TV screen. If the variations persist, move the unit further away from the TV. LCD TV is not prone to such variation.
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not expose the unit to moisture, to temperatures higher than 113°F (45°C) or to extremely low temperatures.
- If the unit does not work properly, unplug and plug it in again. Then turn on the unit.
- In case of an electrical storm, unplug the unit for safety.
- Hold the AC power plug by the head when removing it from the AC outlet, as pulling the cord can damage internal wires.
- Do not place anything on top of the unit.
- The AC power plug is used as a disconnect device and shall always remain readily operable.
- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**
- This unit should only be used within the range of 32°F - 113°F (0°C - 45°C).
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Warning:

The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.

■ Volume Control

The sound level at a given volume setting depends on speaker efficiency, location and various other factors. It is advisable to avoid exposure to high volume levels, which occurs while turning the unit on with the volume control setting up high, or while continually listening at high volumes.

■ Before use

- Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
- Do not open the cabinet as this might result in damage to the circuitry or electrical shock, if a foreign object should get into the set, contact your dealer.
- When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
- Do not attempt to clean the unit with chemical solvents as this might damage the unit. Use a clean, dry cloth.
- In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as a vacation.
- Keep this manual in a safe place for future reference.

CONSUMER LIMITED WARRANTY (Valid in the U.S. Only)

MIZARI ENTERPRISES, INC. warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction. In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of MIZARI.

The warranties described herein shall be the sole and exclusive warranties granted by MIZARI and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of MIZARI to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

In no event shall MIZARI be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall MIZARI be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND PUERTO RICO.

Model Specific Section

Your Product Model Number & Description:

**HT-SBW192
SOUND BAR HOME THEATER SYSTEM**

Warranty Period for this Product:

(Be sure to have this information available when you need service for your Product.)

Additional Item(s) Excluded from Warranty Coverage (if any):

One (1) year parts and labor from the date of purchase. Accessories, supplies, and consumable items.

What to do to Obtain Service:

Call Sharp toll free at 1-877-506-4900

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL **1-877-506-4900**

SHARP is a registered trademarks of SHARP CORPORATION; used under license by SHARP Corporation

MARKETED BY : MIZARI ENTERPRISES, INC.
5455 WILSHIRE BOULEVARD, SUITE 1410,
LOS ANGELES, CA 90036

SHARP NORTH MALAYSIA SDN. BHD.
LOT 202, BAKAR ARANG INDUSTRIAL ESTATE,
08000 SUNGAI PETANI, KEDAH, WEST MALAYSIA.

CONSUMER LIMITED WARRANTY (Valid in Canada Only)

MIZARI ENTERPRISES, INC. warrants to the first purchaser for this Sharp brand product ("Product"), when shipped in its original container and sold or distributed in Canada by MIZARI or by an authorized MIZARI dealer, and Product was not sold "as is" or "sales final" that the Product will during the applicable warranty period, be free from defects in material and workmanship, and will within the applicable warranty period, either repair the defective Product or provide the first purchaser a replacement of the defective Product.

Conditions: This limited warranty shall not apply to:

- (a) Any cosmetic damage to the Product surface or exterior that has been defaced or caused by normal wear and tear.
- (b) Any defects caused or repairs required as a result of damage caused by any external or environmental conditions, including but not limited to, transmission line/power line voltage or liquid spillage or acts of God.
- (c) Warranty claims for Products returned with illegible or without appropriate model, serial number and CSA/cJUL markings.
- (d) Any Products used for rental or commercial purposes.
- (e) Any installation, delivery, setup and/or programming charges.
- (f) Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual or other applicable Product documentation.
- (g) Any defects caused or repairs required as a result of any Product that has been tampered with, modified, adjusted or repaired by any person other than MIZARI, a Sharp authorized service center or a MIZARI authorized servicing dealer.
- (h) Any defects caused or repairs required as a result of the use of the Product with items not specified or approved by MIZARI, including but not limited to, head cleaning tapes and chemical cleaning agents.
- (i) Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the Product, including but not limited to, earphones, remote controls, AC adapters, batteries, temperature probe, trays, filters, belts, ribbons, cables and paper.

How to get service: Warranty service information may be obtained calling 905-568-7140. No other person (including any MIZARI dealer or service center) is authorized to extend, enlarge or transfer this warranty on behalf of MIZARI. The purchaser will be responsible for any and all removal, reinstallation, transportation and insurance costs incurred.

The express warranties in this limited warranty are, except for consumer purchasers domiciled in Quebec, in lieu of and, except to the extent prohibited by applicable law, MIZARI disclaims all other warranties and conditions, express or implied, whether arising by law, statute, by course of dealing or usage of non-infringement.

Limitations: (not applicable to consumer purchasers domiciled in Quebec to the extent prohibited under Quebec law): (a) MIZARI shall not be liable for any incidental, special, consequential, economic, exemplary or indirect damages of any kind or nature (including lost profits or damages for loss of time or loss of use or loss of data) arising from or in any connection with the use or performance of a Product or a failure of a Product, even if MIZARI is aware of or has been advised of the possibility of such damages; (b) the remedies described in this limited warranty constitute complete fulfillment of all obligations and responsibilities of MIZARI to the purchaser with respect to the Product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. Some provinces may not allow the exclusion or limitation of certain damages, or limits on the duration or voiding of implied warranties or conditions; in such provinces, the exclusions and limits herein may not apply. This limited warranty is, except for consumer purchasers domiciled in Quebec, governed by the laws of the Province in Canada in which the purchaser has purchased the Product. For consumer purchasers domiciled in Quebec this limited warranty is governed by the laws of Quebec.

WARRANTY PERIODS (calculated from the date of original purchase): Parts & Labour (exceptions noted)

Audio Product 1 year

To obtain the name and address of the nearest Authorized Mizari Service Centre or Dealer, or for more information on this Limited Warranty, Mizari Extended Warranty Offers, Products or Accessory Sales, please contact Sharp:

- By calling Sharp Electronics Of Canada Ltd. at 905-568-7140

THIS LIMITED WARRANTY IS VALID ONLY IN CANADA

SHARP is a registered trademarks of SHARP CORPORATION; used under license by SHARP Corporation

TO OBTAIN SUPPLY, ACCESSORY OF PRODUCT INFORMATION, CALL 905-568-7140

MARKETED BY: MIZARI ENTERPRISES, INC.
1274 RINGWELL DRIVE, UNIT #2
NEWMARKET, ON L3Y 9C7
CANADA





SHARP NORTH MALAYSIA SDN. BHD.
LOT 202, BAKAR ARANG INDUSTRIAL ESTATE,
08000 SUNGAI PETANI, KEDAH, WEST MALAYSIA.

Introduction

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

Accessories

Please confirm that only the following accessories are included.

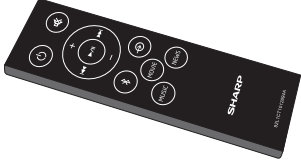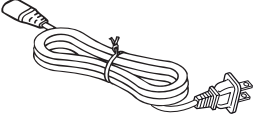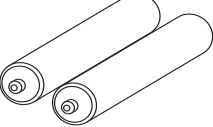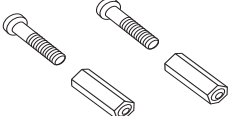
 <p>Remote Control x 1 92L1CT1012694A</p>	 <p>AC Cord x 2 92L4150SPT263A</p>	 <p>Battery AAA x2 92L1AAA001502A</p>	 <p>Wall Plugs & Screws x2 92L203R628032A</p>
---	--	--	---

Contents

	Page		Page
Special Notes		Operation	
General.....	1	Basic operations	12
FCC Statement.....	2	Bluetooth operation	12
Important safety instructions	3	USB operation	12
Precautions		Subwoofer connection.....	12
General.....	4	Troubleshooting	13
Volume control.....	4	Specifications	
Before use	4	General.....	14
Warranty		Bluetooth	14
Consumer limited warranty (USA).....	5	Remote control	14
Consumer limited warranty (Canada).....	6		
Introduction			
Accessories	7		
Contents	7		
Controls and indicators			
Main unit and subwoofer	8		
Remote control	9		
Placement and mounting			
Placement.....	10		
Wallmounting.....	10		
System connection			
Preparation to use	11		
HDMI ARC input	11		
Optical input.....	11		
LINE IN input	11		
Connect to power	11		

Controls and indicators

 ■ Main unit and Subwoofer

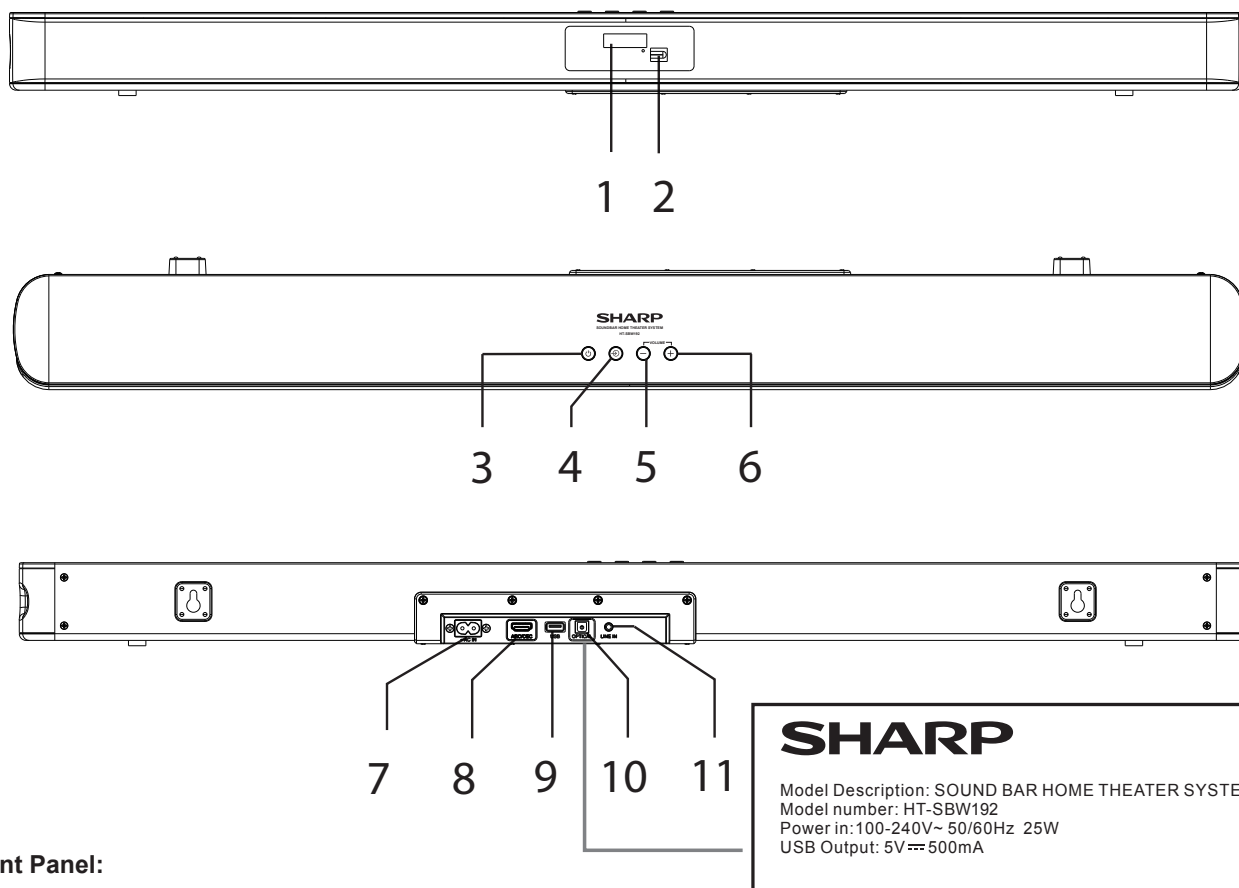

Front Panel:

1. **Display screen:** Shows information in relation to the mode/function being used.
2. **Remote sensor:** Point the remote at the sensor.

Top Panel:

3. **STANDBY button:** press to turn on or enter standby.
4. **INPUT button:** Press to select the source.
5. **VOLUME- button:** Press to decrease the volume level.
6. **VOLUME+ button:** Press to increase the volume level.

Rear Panel:

 
7. **AC IN Socket:** Used to connect an AC cord.
8. **HDMI(ARC IN) port:** Used to connect a HDMI cord.
9. **USB port:** Used to connect a USB flash disk.
10. **OPTICAL DIGITAL AUDIO INPUT port:** Used to connect an optical cable.
11. **LINE IN port:** Used to connect external audio sources.

Subwoofer Rear Panel:

12. **AC IN Socket:** Used to connect an AC cord.
13. **Bluetooth Pairing Button:** Press to pair Bluetooth connection.
14. **Bluetooth pairing indicator**


Note:

The spec label is located at the bottom of the unit. The spec label illustration may be different from the actual label used.

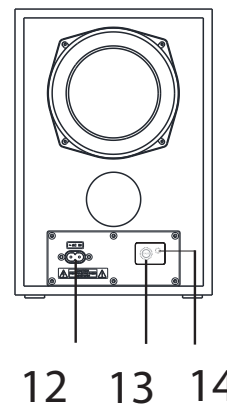

Controls and indicators (continued)

 Remote control

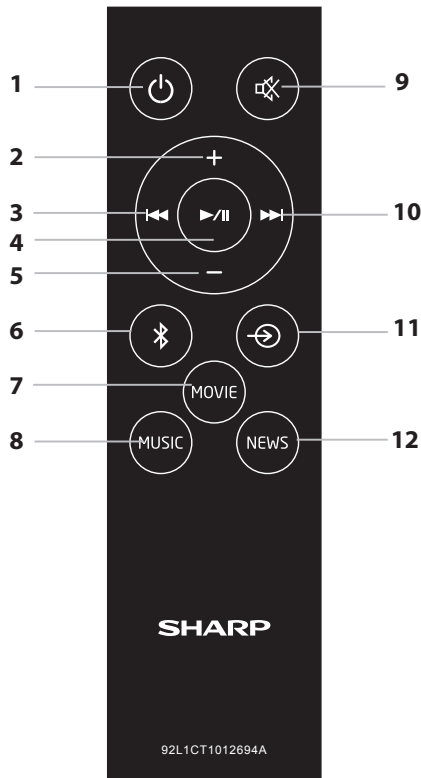


1. **STANDBY:** Press this to switch on the unit. Press it again to put the unit in standby mode.
2. **VOLUME +:** Press this to increase volume.
3. **PREVIOUS:** Press this to skip to the previous track.
4. **PLAY/PAUSE:** Press this to temporarily pause a playback. Press it again to resume the playback. Press and hold this button for 3 seconds to disconnect bluetooth connection.
5. **VOLUME -:** Press this to decrease volume.
6. **BLUETOOTH:** Press this to enter Bluetooth mode.
7. **MOVIE:** Press to enter the Eq2 equalizer mode MOVIE (recommended for viewing movie).
8. **MUSIC:** Press to enter the Eq1 equalizer mode MUSIC (recommended for listening music).
9. **MUTE:** Press this to mute the sound. Press it again to unmute.
10. **NEXT:** Press this to skip to the next track.
11. **INPUT:** Press repeatedly to switch among BLUETOOTH, LINE IN, OPTICAL, ARC or USB mode.
12. **NEWS:** Press to enter the Eq3 equalizer mode that is preset equalizers NEWS (recommended for viewing news).

Battery installation

Fitting or replacing the remote control battery

Use 2 "AAA" size batteries (UM/SUM-4, R3, HP-16 or similar).

 1. Remove the batteries compartment cover on the back of the remote control.
2. Load two AAA/1.5V batteries into the battery compartment making sure that the battery have been inserted with the correct polarities matching the symbols +, - as indicated inside the battery compartment.
3. Replace the battery cover and clip it in place.

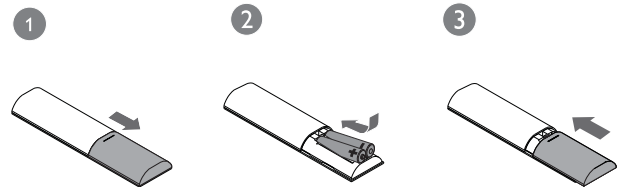

Caution:

- Replace all old batteries with new ones at the same time.
- Remove the batteries if the unit will not be used for a long period of time. This will prevent potential damage due to battery leakage.
- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Risk of fire explosion if the battery is replaced by an incorrect type.

Notes concerning use:

- Exposing the sensor on the unit and remote control to strong light may interfere with operation. Change the lighting or the direction of the unit if this occurs.
- Keep the remote control away from moisture, heat shock, and vibrations.

Remote control operation

 
- Point the remote control at the remote sensor on the front panel.
- The remote control works within a distance of about 26 ft. (8 m) from the sensor and within an angle of about 30 degrees from the left and right side.

Placement and Mounting


■ Placement

A: Standard Placement

(Place Soundbar on leveled surface in front of TV)

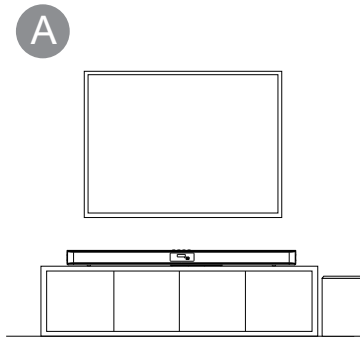

B: Wall Mounting

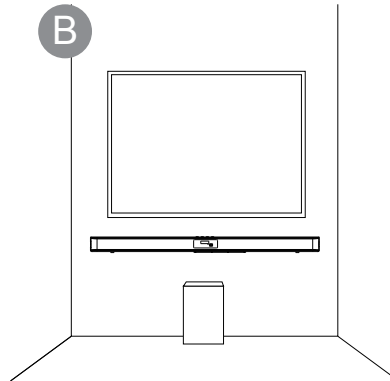 

■ Wall Mounting

 
 
 
In order to prevent injuries, the sound bar device must be securely fasten to the wall in accordance with the below installation instructions.

1. Drill the two holes (about 1/4" diameter) in the wall and keep the distance between the drill holes of the sound bar is 28-3/4". Insert the two plugs supplied into two drilled holes and then insert two screws supplied into two holes and tighten. (As shown in the picture on the right).
2. Take care to leave 5/32" between the screw heads and wall. (As shown in the picture on the right).
3. Use the assembled sound bar to hang on the setscrews on the wall. (As shown in the picture on the right).

Note:

- Installation must be carried out by qualified personnel only.
- Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall).
- The installer's responsible for verifying that the wall will safely support the total load of the unit and wall brackets.
- Additional tools (not included) are required for the installation. Do not overtighten screws.
- Keep this instruction manual for future reference. Use an electronic stud finder to check the wall type before drilling and mounting.

28-3/4" (730mm)

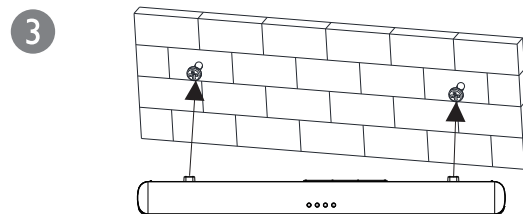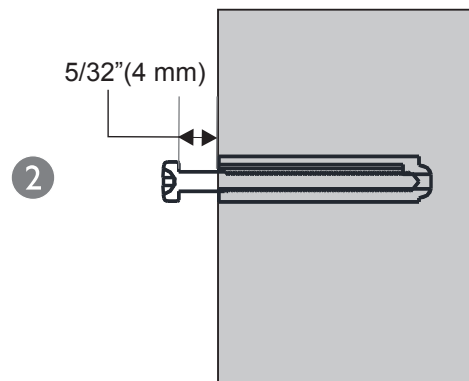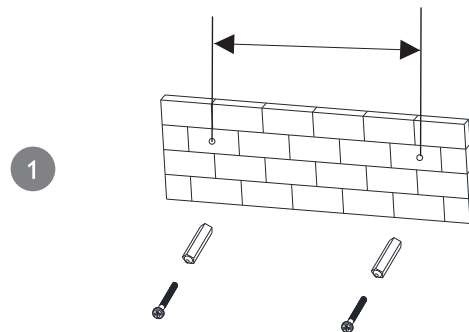


System connection


■ Preparation for use

CAUTION:
TO PREVENT ELECTRIC
SHOCK MATCH WIDE
BLADE OF PLUG TO WIDE
SLOT, FULLY INSERT.

 AC outlet
(AC 100 - 240V
~50/60 Hz)

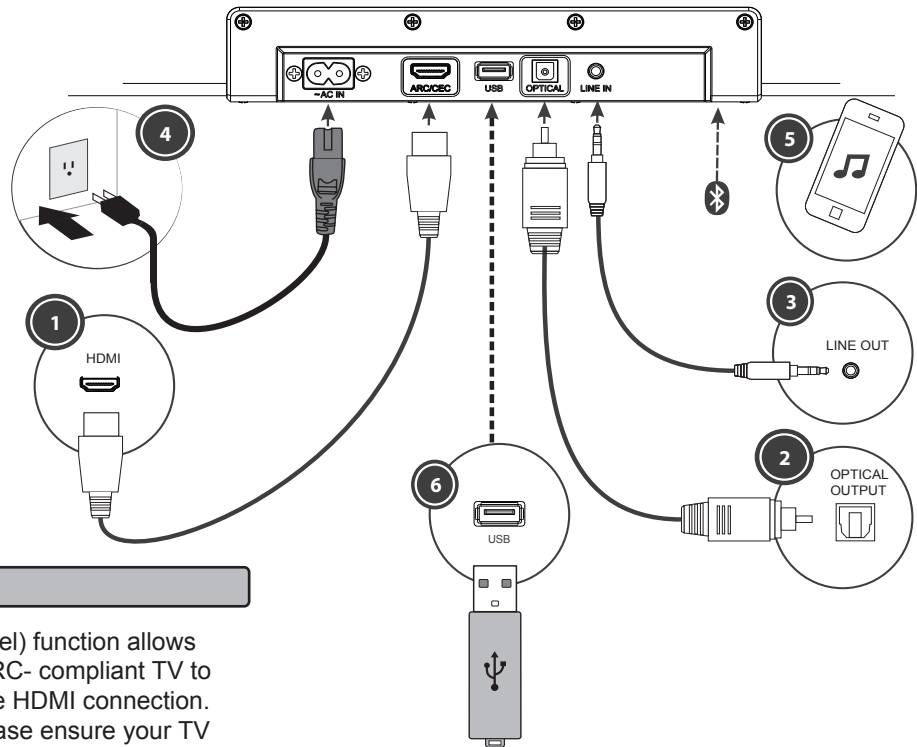


■ HDMI ARC input (1)

- The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your sound bar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the sound bar.
- Connect the HDMI cable (not included) from unit's HDMI (ARC) socket to the HDMI (ARC) socket on your ARC compliant TV. Then press the  button on remote control to select HDMI ARC.

Note: Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.


■ OPTICAL input (2)

- Remove the protective cap of the OPTICAL socket, then connect an OPTICAL cable (not included) to the TV's OPTICAL OUT socket and the OPTICAL socket on the unit.
- Press the  button on the remote control to switch to the Optical input mode, the word "OPT" will be shown on the display screen means to select the Optical mode.

Note:

The external device audio output must be set to PCM.

■ LINE IN input (3)

- A. Use a RCA to 3.5mm audio cable (not included) to connect the TV's audio output sockets to the LINE IN socket on the unit.
 - B. Use a 3.5mm to 3.5mm audio cable (not included) to connect the TV's or external audio device headphone socket to the LINE IN socket on the unit.
- Press the  button remote control to select LINE IN, The word "LINE" will be shown on the display screen.


■ Connect to power (4)

Please ensure that the voltage marked on the rating label, located on the rear panel, is the same as the voltage in your area.

- Insert the end of the power lead in to the AC IN socket on the back of the unit.
- Plug the other end of the cable in to the wall socket.


 
 
■ Bluetooth operation (5)

The Sound Bar Home Theater System has Bluetooth capability and is able to receive a signal within a range of 32 feet. To pair the Sound Bar Home Theater System with a Bluetooth device:

1. Press the source button  on the unit, or button on the remote control button repeatedly to enter the Bluetooth mode, the "no bt" message appears on the display.
2. Activate your Bluetooth device and select the search mode.
3. Select "HT-SBW192 SHARP" from the search list and connect.
4. Enter "0000" for password if prompted.
5. When the devices are connected to each other, a confirmation sound will be made. "bt" will show on the display.
6. You can now playback music from your device. Please note that the volume on the Bluetooth source device operates independently to the volume of the unit.
7. To turn off the Bluetooth function: disable the function on your Bluetooth source device.

System connection (continued)

■ USB operation (6)

1. Insert the USB storage drive into the USB slot on the rear panel.
2. Press the  button repeatedly on the remote control to select USB mode.
3. The sound bar will automatically start playing the MP3 tracks from the connected USB drive. If playback does not start automatically, press the  button.
4. To skip to the previous/next track, press the  buttons on the remote control.

Notes:

- MP3 format is supported.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played
- Even when the files are in a supported format (MP3), some may not play or display depending on the compatibility.
- In some case, reading may be as long as 60 seconds, this is not a malfunction.
- Depending on the amount of data and media speed, it may take longer for the unit to read the USB device.
- The maximum USB memory size is 32GB.
- USB memory device must be formatted in FAT, FAT16 or FAT32

■ Subwoofer Connection (7)


Press STANDBY button on the remote control to power on the sound bar.

Make sure the AC power cord for the subwoofer is connected to a power supply securely.


The subwoofer can receive the wireless audio signal from the sound bar when the indicator light flashing red on the subwoofer.

 
The subwoofer is in searching wireless signal and enter pair status with soundbar, the indicator light on the subwoofer keeps solid blue means the sound bar and subwoofer are connected.

Manually connecting the subwoofer and sound bar:

When the subwoofer can not be connected to the sound bar and the indicator light on the subwoofer will flash red, press and hold  button on the sound bar or on the remote control, the sound bar will repair with the subwoofer, the indicator light on the subwoofer keeps solid blue when the subwoofer and sound bar were connected.

Disconnecting the subwoofer and sound bar:

Press and hold  button on the sound bar or PAIR button on the subwoofer to disconnect the connection subwoofer and sound bar when the subwoofer and sound bar was connected.

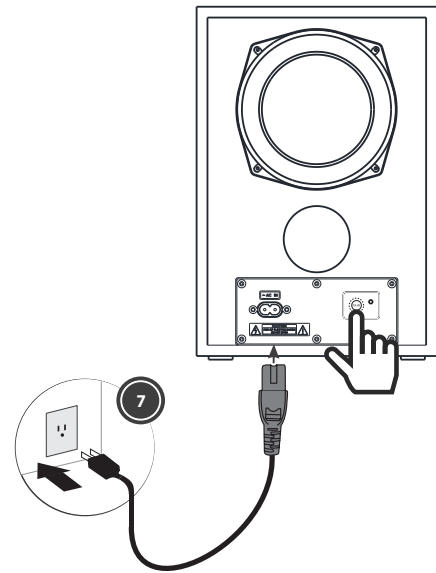

Operations

■ Basic operations


Standby mode

Press the STANDBY button on the unit or the remote to put the system into standby mode. To resume normal operation, press this button again.

Note: This unit is designed to enter STANDBY mode automatically, after about 15 minutes (approximately) of inactivity. Press STANDBY button to wake the unit.

Note: When you power on the unit from standby, it will resume in the mode that was last used.

Switching modes

To switch between the modes: Press the  button on the unit or on the remote control to select LINE IN, OPTICAL, HDMI ARC, USB mode, or BT (Bluetooth).

Adjust the Volume

Press the + / - buttons on the unit or press the VOL+ / VOL- buttons on the remote control to adjust the volume.

If you wish to turn the sound off, press the MUTE button on the remote control. Press the MUTE button again or press the VOL+ / VOL- buttons on the unit or on the remote control to resume normal listening.

Select Equalizer (EQ) Effect

While playing, press the MOVIE, MUSIC, or NEWS button on the remote control to select the preset equalizers: Movie (recommended for viewing movies), Music (recommended for listening to music), NEWS (recommended for listening to NEWS).

Troubleshooting

Many potential problems can be resolved by the owner without calling a service technician. If something is wrong with this product, check the following before calling your authorised dealer or service centre.

Problem Description	Cause	Solution
The unit is not powered on	<ul style="list-style-type: none">• Power cable not connected to wall socket• Power socket is not switched on	<ul style="list-style-type: none">• Make sure the plug is connected• Switch the power on
No sound from LINE IN/Bluetooth/HDMI ARC input	<ul style="list-style-type: none">• Volume is too low• LINE IN/Bluetooth/HDMI ARC source volume is too low	<ul style="list-style-type: none">• Increase the volume• Increase the output volume of the LINE IN/Bluetooth/HDMI ARC source
Sound is distorted from LINE IN Input	<ul style="list-style-type: none">• Volume is too high• LINE IN source volume is too high	<ul style="list-style-type: none">• Reduce the volume• Reduce the output volume of the LINE IN source
Unit switches off after 15 minutes of inactivity	<ul style="list-style-type: none">• Auto standby mode in operation	<ul style="list-style-type: none">• This unit is designed to enter STANDBY mode automatically after 15 minutes of inactivity. Press the STANDBY button to wake up the unit.

Specifications

■ General

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Frequency Response	150Hz - 20KHz
Power Supply	AC 100-240V~ 50/60Hz
Power Consumption	25W
Standby Power Consumption	≤ 0.5 W
Output Power	2 x 25W (RMS)
Dimensions (W x D x H)	36 1/4" x 3 3/8" x 2 5/16" (920 x 85 x 59mm)
Weight	2.1 kg

■ Bluetooth

Version	V5.3
Maximum power transmitted	< 20 dbm
Frequency bands	2.402 GHz - 2.480 GHz
Compatible Bluetooth Profile	A2DP, AVRCP, HFP, SBC
Operating range	32 feet (10 meters)

■ Remote control

Battery Type	2x AAA / 1.5V
--------------	---------------

■ Subwoofer

Subwoofer power supply	AC ~100-240V,50/60Hz
Subwoofer power output (Max)	60W
Subwoofer frequency response	50Hz~160Hz
Dimensions (W x D x H)	7 7/8" x 9" x 11 1/2" (200 x 230 x 293mm)
Weight	2.9 kg

SHARP®

SHARP CORPORATION