

# SHARP

Speaker System

MODEL  
**PS-914**

## OPERATION MANUAL



DUAL PAIRING



MIC INPUT



PMPO



PLAYBACK



LED LIGHT  
EFFECT



PLAYTIME



FM  
DIGITAL TUNER

## Special notes

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SHARP is under license. Other trademarks and trade names are those of their respective owners.

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), revenue-generating streaming applications (via Internet, intranets and/or other networks), other revenue-generating content distribution systems (pay-audio or audio-on-demand applications and the like) or on revenue-generating physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like).

An independent license for such use is required. For details, please visit <http://mp3licensing.com> MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. It must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### IC Radiation Exposure Statement (For Users In Canada)

This Class B digital apparatus complies with the Canadian ICES-003.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation.

### FOR YOUR RECORDS

For your assistance in reporting this unit in case of loss or theft, please record below the model number and serial number which are located at the rear of the unit. Please retain this information.

Model number \_\_\_\_\_  
Serial number \_\_\_\_\_  
Date of purchase \_\_\_\_\_  
Place of purchase \_\_\_\_\_

## FCC Statement

### FCC Notice

Supplier's Declaration Of Conformity  
SHARP SPEAKER SYSTEM PS-914

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

MIZARI ENTERPRISES, INC.

5455 WILSHIRE BOULEVARD, SUITE 1410, LOS

ANGELES, CA 90036

TEL: 1-800-BE-SHARP

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

## Special notes (continued)

### ■ Radio Frequency Exposure

SHARP PS-914 SPEAKER SYSTEM is a radio transmitter and receiver. When in operation it communicates with a *Bluetooth*® equipped mobile device by receiving and transmitting radio frequency (RF) electromagnetic fields (microwaves) in the frequency range 2.4 to 2.48 GHz. This product is designed to operate in compliance with the RF exposure guidelines and limits set by national authorities and international health agencies when using compatible mobile phone.

### ■ Battery information

- A rechargeable battery has a long service life if treated properly.
- A new battery or one that has not been used for a long period of time could have reduced capacity the first few times it is used. Do not expose the battery to extreme temperatures, never above 104°F (40°C) or below 23°F (-5°C).
- For maximum battery capacity, use the battery at room temperature.
- If the battery is used in low temperatures, the battery capacity will be reduced.
- The battery can only be charged in temperatures between 41°F (5°C) and 104°F (40°C).
- **RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

### ■ Removal of waste batteries and accumulators

In case this product contains a battery incorporated within the product which cannot be readily removed by end users, SHARP recommends that only qualified professionals remove the battery, either for replacement or for recycling at the end of this product's working life.

To prevent damage to the product, and for their own safety, users should not attempt to remove the battery and should contact authorised independent service providers for advice.

#### Caution:

Internal lithium battery in the unit should not be replaced by end users due to danger of explosion if battery is incorrectly replaced and must be replaced with the exact type battery by authorised service providers.

#### Recycling lithium-ion batteries:

Lithium-Ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.call2recycle.org/>

#### Caution:

Do not handle damaged or leaking Lithium-Ion batteries.

The RBRC™ Battery Recycling Seal on the Lithium-ion (Li-ion) batteries/battery packs indicates SHARP is voluntarily participating in an industry program to collect and recycle these batteries/battery packs at the end of their useful life, when taken out of service in the United States or Canada. The RBRC™ program provides a convenient alternative to placing Li-ion batteries into the trash or municipal waste stream, which is illegal in some areas.

Please call 1-800-822-8837 for information on Li-ion battery recycling in your area.

SHARP's involvement in this program is part our commitment to preserving our Li-ion environment and conserving our natural resources.

(RBRC™ is a trademark of the Rechargeable Battery Recycling Corporation.)



## Important Safety Instructions

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of this product, please read the following precautions carefully before use.

- 1) Read these instructions.
  - 2) Keep these instructions.
  - 3) Heed all warnings.
  - 4) Follow all instructions.
  - 5) Clean only with water. Do not use chemicals.
  - 6) Only use attachments/accessories specified by the manufacturer.
  - 7) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, does not operate normally, or has been dropped.
  - 8) To prevent fire or shock hazard, do not dismantle the product.
- No objects shall be placed on the apparatus.

## Precautions

The sound level at a given volume setting depends on speaker efficiency, location and various other factors. It is advisable to avoid exposure to high volume levels, which occurs while turning the unit on with the volume control setting up high, or while continually listening at high volumes. Adjust the volume to an appropriate level when using the unit.

- Do not cover the product with items, such as newspapers, tablecloths, curtains, etc. while charging.
- Keep the unit away from strong magnetic fields, excessive dust, humidity and electronic/ electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not expose the unit to temperatures higher than 104°F (40°C) or to extremely low temperatures.
- **Do not remove the outer cover. Refer internal service to your local SHARP service facility.**
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- This unit should only be used within the range of 23°F - 104°F ( -5°C - 40°C).
- SHARP is not responsible for damage due to improper use. Refer all servicing to a SHARP authorized service center.
- This product contains magnetic material. Consult your physician or whether this might affect your implantable medical device.
- Do not make unauthorized alterations to this product.

## Precautions (continued)

- Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC, etc.).
- The product rating is located at the rear of the product.

### CAUTION:

- Risk of explosion if the battery is replaced by an incorrect type
- High or low extreme temperatures that a battery can be subjected to during use, storage or transportation; and low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Overview

Thank you for purchasing SHARP PS-914 SPEAKER SYSTEM. Please read this instruction and warnings carefully before use to ensure safe and satisfactory enjoyment of this product.

### **Bluetooth® Wireless Technology**

With this technology, you can connect the unit to its compatible *Bluetooth*® devices without using cables. The maximum distance between both devices cannot exceed about 32 feet (10 meters). The *Bluetooth*® wireless connection may be interfered by obstacles (such as walls) or other electronic devices nearby.

In some areas, the use of *Bluetooth*® wireless technology may be subjected to some constraints. Please consult your local authority or service provider for details.

### ■ Getting started

Fully charge the unit before using.

For details, refer “Charging operation” on page 9.

Meanwhile, choose a smartphone or other Bluetooth device that is compatible with this product.

### CONSUMER LIMITED WARRANTY (Valid in the U.S. Only)

MIZARI ENTERPRISES, INC. warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction. In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of MIZARI.

The warranties described herein shall be the sole and exclusive warranties granted by MIZARI and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of MIZARI to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

In no event shall MIZARI be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall MIZARI be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND PUERTO RICO.

#### Model Specific Section

Your Product Model Number & Description:

**PS-914**

**SPEAKER SYSTEM**

Warranty Period for this Product:

(Be sure to have this information available when you need service for your Product.)

Additional Item(s) Excluded from Warranty Coverage (if any):

One (1) year parts and labor from the date of purchase. Accessories, supplies, and consumable items.

What to do to Obtain Service:

Call Sharp toll free at 1-800-BE-SHARP

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL **1-800-BE-SHARP**

**SHARP is a registered trademarks of SHARP CORPORATION; used under license by SHARP Corporation**

MARKETED BY : MIZARI ENTERPRISES, INC.  
5455 WILSHIRE BOULEVARD, SUITE 1410,  
LOS ANGELES, CA 90036

 
SHARP NORTH MALAYSIA SDN. BHD.  
LOT 202, BAKAR ARANG INDUSTRIAL ESTATE,  
08000 SUNGAI PETANI, KEDAH, WEST MALAYSIA.

## Introduction

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.


## Accessory

The following accessory is included.



**TYPE-C USB Cable x1**

 92L1920005001A




**Microphone x1**

92L1363000007A

## Contents


	Page		Page
<b>Special notes</b>		Radio operation.....	11
FCC Statement.....	1	USB operation.....	11
Radio frequency exposure .....	2	Bluetooth operation.....	11
Battery information .....	2	TWS operation.....	12
Removal of waste batteries and accumulators.....	2	AUX-IN operation.....	12
<b>Important Safety Instructions</b> .....	3	<b>Troubleshooting chart</b>	
<b>Precautions</b> .....	3	General.....	13
<b>Overview</b> .....	5	Bluetooth.....	13
<b>Warranty</b>		USB.....	13
Limited Warranty for the U.S.....	6	Condensation.....	13
<b>Introduction</b>		If problem occurs during operation.....	13
Accessory.....	7	<b>Maintenance</b>	
Contents.....	7	Cleaning the cabinet.....	13
<b>Controls and indicators</b>		<b>Specification</b>	
Top view.....	8	General.....	14
Front and rear view.....	8	Bluetooth.....	14
<b>Charging operation</b>		USB.....	14
Charging the unit.....	9		
<b>General control</b>			
To turn the power on or off.....	10		
Setting function mode.....	10		
Adjusting the volume .....	10		
Equalizer.....	10		
Bass adjustment.....	10		
Key level adjustment.....	10		
Microphone echo adjustment.....	10		
Flashing light.....	10		
 
### ■ Top view

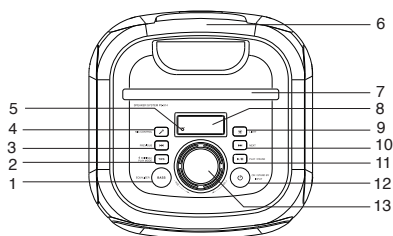


1. EQUALIZER/BASS BUTTON
2. BT PAIRING/PLAY MODE BUTTON
3. ◀◀ BUTTON
4. MIC CONTROL BUTTON (MIC VOLUME, ECHO EFFECT, KEY ADJUSTMENT)
5. CHARGING INDICATOR
6. HANDLE
7. SMARTPHONE HOLDER
8. LED DISPLAY
9. LIGHT BUTTON
10. ▶▶ BUTTON
11. ▶/|| BUTTON
12. ⏻/INPUT BUTTON
13. VOLUME KNOB

### ■ Front and rear view

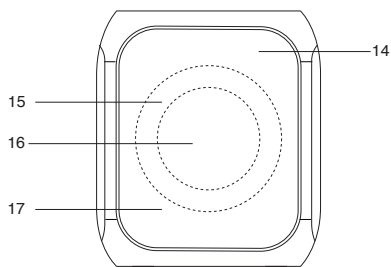 

 14. TWEETER
15. STROBE LIGHT
16. WOOFER
17. SPEAKER GRILLE

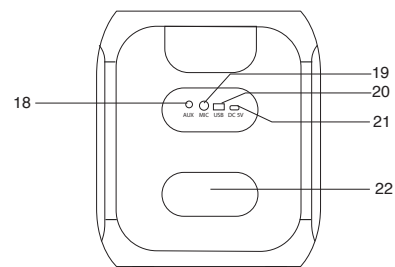


18. 3.5MM AUX IN JACK
19. 6.3MM MIC JACK
20. USB PORT
21. TYPE-C USB PORT
22. BASS REFLEX DUCT

## Charging operation
 
### ■ Charging the unit

1. This unit works with rechargeable lithium battery (the battery capacity 2000mAh). Fully charge the unit (around 4 hours) before using the product for the first time. The playback time has about 6 hours after full charging.
2. Connect the TYPE-C USB cable (included) into the TYPE-C USB port on the unit initiates the charging of the battery, connect the other end of the USB cable to a suitable power source such as your computer, notebook, USB-C power adapter, or power bank, the charging LED indicator lights red during charging, when the battery is fully charged the indicator will turn to green. When the unit is with low battery, the LED indicator will flash in red.

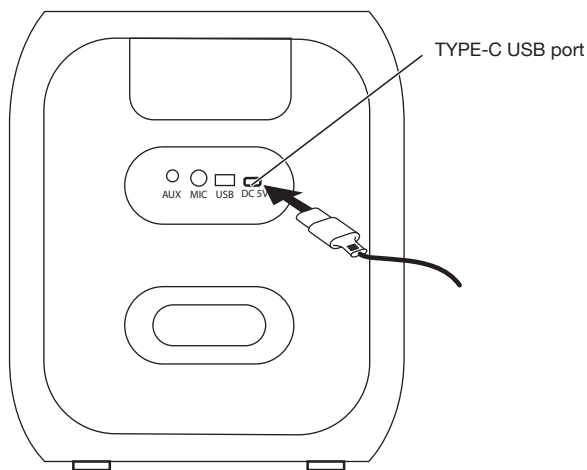


Before using any adapter with the charging cable, check whether the specifications of the adapter meets the requirements. The recommended output voltage of the adapter is DC5V+/-0.25V, and the recommended output current is 2A. An over-high charging voltage may damage the charging cable and unit.

**Warning:**

Use the recommended adapter whenever possible. Use of other types of adapters may violate the warranty terms of the equipment and is hazardous. Use the provided charging cable to connect with a certified adapter or computer to charge the unit.

## General control


### ■ To turn the power on or off

Press and hold the  **INPUT** button to switch the unit on/off.

#### Note:

Electrostatic Discharge hints-The unit may reset or may not reset to normal operation mode due to electrostatic discharge, just switch it off and reconnect again.

### ■ Setting the function mode

To change the function modes, press the  / **INPUT** button repeatedly to choose FM/AUX /BLUETOOTH/USB function.

### ■ Adjusting the volume

Rotate the **VOLUME** knob on the unit to increase or decrease the music volume.

### ■ Adjusting the mic volume

Press the **MIC CONTROL** button on the unit to switch to "EU00" displayed, and then rotate the **VOLUME** knob to increase or decrease the microphone volume.

### ■ Equalizer

This unit has a built-in equalizer system, Press the **EQUALIZER/BASS** button on the unit to select a setting that best matches the music style: FLAT, POP, CLASSIC, JAZZ, and ROCK.

### ■ Bass adjustment

Press and hold the **EQUALIZER/BASS** button on the unit to turn on or off the bass effect.

### ■ Key level adjustment

You can create a funny sound of the voice from the microphone by adjusting the key level.

1. Plug the microphone, the key adjustment function will be active to the microphone output.
2. Press the **MIC CONTROL** button repeatedly until "H-00" displayed. There are 4 kinds of key levels, rotate the **VOLUME** knob to select the desired level.
3. To quit the KEY adjustment function, press the **MIC CONTROL** button repeatedly until the display shows "OFF".

### ■ Microphone echo adjustment

Press the **MIC CONTROL** button on the unit to switch to "EC00" displayed, and then rotate the **VOLUME** knob to increase or decrease the echo effect.

### ■ Flashing light

There are 5 flashing modes of the full panel light show. Press the **LIGHT** button to choose the light modes. To turn off the light, press the **LIGHT** button until "LOFF" shows on the display.

## Radio operation

Press the **⏻ / INPUT** Button on the unit repeatedly until, the display reads FM and the radio frequency.

### Tuning to a radio station

If you know the station frequency that you want to tune to directly:

Press the **⏪** or **⏩** button repeatedly. The station frequency is shown on the display.

### Auto preset memory/scan

To scan for stations within reception range and save them to preset memory automatically, press the **▶/||** button. After the unit is finished scanning, the unit will automatically tune to preset number 1(P-01). To tune to a preset station:

To tune to the next preset station, press and hold the **▶/||** button.

To tune to the previous preset, press and hold the **⏪** button.

## USB operation

1. Press the **⏻ / INPUT** button on the unit to select USB mode.
2. Plug the USB memory stick to the USB port on back of the unit. Playback will start automatically from Track 1.
3. To pause playback, press the **▶/||** button on the unit. The playing time will flash on the display.
4. To resume playback, press the **▶/||** button again.
5. To select a desired track, press the **⏩** or **⏪** button respectively during playing until the desired track appears on the display. The unit will start play automatically.
6. To search for a particular passage during playback, press and hold the **⏪** or **⏩** button to scan the current playing track at high speed until desired point (passage) appears, then release the button for normal playback mode.

**Important:** The USB port is intended for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended. Do not plug the USB from the unit when playing or reading the USB device.

## REPEAT PLAY

You can play one track or all tracks on the USB repeatedly.

### To repeat a Single Track

Press the **BT PAIRING/PLAY MODE** button on the unit repeatedly until the display shows "ONE" and the current track will be played over and over again.

### To repeat all the Tracks

Press the **BT PAIRING/PLAY MODE** button on the unit repeatedly until the display shows "ALL" and all tracks on the USB will be played over and over again.

### To repeat the folder (only for USB which contains more than one folder)

Press the **BT PAIRING/PLAY MODE** button on unit repeatedly until "FOLD" shows on the display, the current folder will be repeated over and over again.

## RANDOM PLAY

Press the **BT PAIRING/PLAY MODE** button on the unit in play mode repeatedly until the "RAN" shows on the display, the random play will start from next track automatically.

To switch off the repeat function, press the **BT PAIRING/PLAY MODE** button on the unit repeatedly until "OFF" shows on the display.

## Bluetooth operation

1. Press the **⏻ / INPUT** button on the unit to switch to BLUETOOTH function, "bt" is flashed on the display.
2. Turn on the Bluetooth function on the device, scan the unit "SHARP PS-914" and connect, then input the password 0000 if required, and the display will show "bt" to indicate connection done. Press Play to start playback.
3. Rotate the **VOLUME** knob on the unit or adjust the volume on the external device to increase or decrease the music volume to your desired level.
4. Press the **BT PAIRING/PLAY MODE** button to disconnect Bluetooth.

**Note:** The Bluetooth works best within 10 meters in open air.

## TWS operation

If you have two units of this model, you can connect the two units by TWS function to become stereo output.

1. Connect the device to one of the units by Bluetooth function
2. Turn on another unit and switch to Bluetooth mode.
3. Press and hold the **BT PAIRING/PLAY MODE** button on the any unit, then these two units will connect automatically with a sound indicated that the connection is done. One unit will show "tS-r" and another unit will show "tS-L", then these two units will become stereo output.
4. Control of EQ, volume, play, pause, next track and previous track, super bass, light adjustment can be done by both units.
5. To quit the TWS between the two units, press and hold the **BT PAIRING/PLAY MODE** button on any unit to disconnect the TWS.

## AUX-IN operation

1. Press the  $\odot$  / **INPUT** button on the unit repeatedly to select the "AUX" mode.
2. Connect your audio device to the AUX IN jack on the rear panel of the unit with an AUX IN cable.(audio cable is not included)
3. Rotate the **VOLUME** knob on the unit or adjust the volume on the external device to increase or decrease the music volume to your desired level.
4. Control the playback with your audio device.

## Troubleshooting chart

### ■ General

Symptom	Possible cause
<ul style="list-style-type: none"><li>No sound is heard.</li></ul>	<ul style="list-style-type: none"><li>The input signal (selection) is not set properly.</li><li>The volume level is set to "0".</li><li>Muting is activated at external device.</li></ul>
<ul style="list-style-type: none"><li>Noise is heard during playback.</li></ul>	<ul style="list-style-type: none"><li>Move the speaker away from any computers or mobile phones.</li></ul>
<ul style="list-style-type: none"><li>The power is not turned on.</li></ul>	<ul style="list-style-type: none"><li>The unit has not enough battery power.</li><li>The protection circuit may be activated. Switch off and on the unit again.</li><li>Battery is completely depleted. Recharge the battery.</li></ul>

### ■ Bluetooth

Symptom	Possible cause
<ul style="list-style-type: none"><li>No sound is heard.</li></ul>	<ul style="list-style-type: none"><li>The unit is too far from the Bluetooth audio source device.</li><li>The unit is not paired with the Bluetooth audio source device</li></ul>
<ul style="list-style-type: none"><li>Bluetooth sound is interrupted or distorted.</li></ul>	<ul style="list-style-type: none"><li>The unit is too near to a device that generates electromagnetic radiation.</li><li>There is an obstacle between the unit and the Bluetooth audio source device.</li></ul>

### ■ USB

Symptom	Possible cause
<ul style="list-style-type: none"><li>Device cannot be detected.</li><li>Playback does not start.</li></ul>	<ul style="list-style-type: none"><li>There is no MP3 file inside the device.</li><li>The device is not properly connected.</li><li>It is an MTP device.</li><li>The device contains AAC file only.</li><li>A false MP3 file is being played back.</li></ul>
<ul style="list-style-type: none"><li>Wrong time display.</li></ul>	<ul style="list-style-type: none"><li>A Variable Bitrate files are being played back.</li></ul>

### ■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet. Condensation can cause the unit to malfunction. If this happens, leave the product under room temperature for about 1 hour. Wipe off any condensation on the product with a soft cloth before operating the unit.

### ■ If problem occurs during operation

When this product is subject to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

**If such a problem occurs, do the following:**

- Switch off and on the unit again.
- If the unit is not restored in the previous operation, do the reset operation.

## Maintenance

### ■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth.

**Caution:**

- Do not use chemicals for cleaning (petrol, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of each component. It may cause malfunctions.

## Specification

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual unit.

### ■ General

<b>Power source</b>	Battery Capacity 7.4 V 2000mAh
	DC IN 5 V $\overline{\text{---}}$ 2 A (TYPE-C USB) Rechargeable Battery
<b>Dimensions</b>	Width: 11-21/32" (296mm) Height: 13-5/8" (346 mm) Depth: 11-27/32" (301 mm)
<b>Weight</b>	13.89 lbs (6.3 kg)
<b>Output power</b>	PMPO: 200W RMS:20W
<b>Type</b>	2-Way Speaker system 8" (200 mm) Woofer 1 X Tweeter
<b>Music playback time</b>	(*1) Approx. 6 hours
<b>Battery charging time</b>	(*1) Approx. 4 hours
<b>FM frequency range</b>	87.5 - 108.0 MHz

(\*1) The time may vary depending on the ambient temperature and the conditions used.

### ■ Bluetooth

<b>Frequency bands</b>	2402 MHz ~ 2480 MHz
<b>Compatible Bluetooth Profile</b>	A2DP (Advanced Audio Distribution Profile), Bluetooth 5.4

### ■ USB

<b>MP3 Bitrate</b>	32 ~ 320kbps
<b>File system support</b>	Supports USB devices with FAT 16/FAT 32 up to 32GB

**SHARP**

**SHARP CORPORATION**